

ALCOTEST CHECKLIST

Municipality: EVESHAM TOWNSHIP Alcotest Ser. #: AR4L-0061

County: BURLINGTON Date of Calibration: 06-27-2011

1. **Certificate of Accuracy Alcotest 7110 MKIII-C** from Draeger Safety for instrument used in the A.I.R.

2. **Certificate of Accuracy CU34 Unit** on Alcotest Instrument used.
Ser. #: DDUN S3-0311

3. **Certificate of Accuracy Alcotest 7110 Temperature Probe** from Draeger Safety for instrument in A.I.R. or equivalent.
Ser. #: DDUJ P2-110

4. **Digital Temperature Measuring System Report of Calibration.**
Ser. #: 101 685 688

5. A. Alcotest 7110 Calibration Record
 B. Alcotest 7110 Calibration Certificate **Part I - Control Tests.**
 C. Alcotest 7110 Calibration Certificate **Part II - Linearity Tests.**
 D. **Alcotest Card** of operator/coordinator who performed tests.
 E. **Certificate of Accuracy Alcotest 7110 Temperature Probe** from Draeger Safety used in the Calibration Tests ["Black Key" probe of Breath Test Coordinator].
Ser. #: DDWA P2-001

6. **Certificates of Analysis** for each **Simulator Solution** used in Calibration/Linearity Tests:

<input checked="" type="checkbox"/> A.	0.04% Solution.	<u>10</u>	<u>A</u>	<u>073</u>
<input checked="" type="checkbox"/> B.	0.08% Solution.	<u>10</u>	<u>A</u>	<u>074</u>
<input checked="" type="checkbox"/> C.	0.10% Solution.	<u>10</u>	<u>F</u>	<u>080</u>
<input checked="" type="checkbox"/> D.	0.16% Solution.	<u>10</u>	<u>A</u>	<u>075</u>

7. Certificate of Accuracy Alcotest CU34 Simulators from Draeger Safety (when conducting the Calibration/Linearity Tests) for:

A. 0.04% used in Calibration/Linearity Testing DDMK S3-0003
 B. 0.08% used in Calibration/Linearity Testing DDAE -0024
 C. 0.10% used in Calibration/Linearity Testing DDUN S3-0311
[Same as instrument's CU34 unit].
 D. 0.16% used in Calibration/Linearity Testing DDRF S3-0009

8. A. New Standard Solution Report following Calibration.
 B. Calibrating CU34 Unit for same [same as CU34 unit on instrument].
 C. Certificate of Analysis 0.10% solution for same.
Lot #: 10 C 077
 D. Alcotest card of operator/coordinator who completed change.

Dräger safety

Alcotest[®] 7110 MKIII-C

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest 7110 MKIII-C has been tested for accuracy and found to be in compliance with the National Highway Traffic Safety Administration Standard for evidential breath testing devices. The Alcotest MKIII-C is compliant as a "mobile" and "nonmobile" EBT with 49 FR 48854, 49 FR 48864 and 58 FR 48705. The manufacturer recommends accuracy verification of this instrument within 12 months of the calibration date below, or sooner, according to your State Specifications.

Certification Date:


SERIAL NUMBER:

7-21-2010

ARUL-0061

Draeger Safety Diagnostics, Inc.



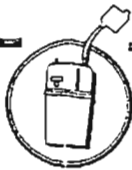

Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDUN53-0311

Certification Date

4-18-11

Technician

MM

Re-Certification Due Date

4-18-12

Dräger

ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST).

The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification.

For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

DDUJP2-110

Certification date:

4-18-11

Next Certification due:

4-18-12

Probe Value

105

Draeger Safety Diagnostics, Inc.
Technical Service Department

MM



Calibration
Certificate No. 1750.01

Calibration complies with ISO 9001
ISO/IEC 17025 AND ANSI/NCSL Z540-1



Cert. No.: 4000-2924465

Traceable® Certificate of Calibration for Digital Thermometer

Manufactured for and distributed by: VWR International, P.O. Box 2158, Secaucus, NJ 07094 U.S.A.

Instrument Identification:

Model: 61220-601 S/N: 101685688 Manufacturer : Control Company

Standards/Equipment:

Description	Serial Number	Due Date	NIST Traceable Reference
Temperature Calibration Bath TC-179	A45240		
Thermistor Module	A17118	11/19/10	A9B21010
Temperature Probe	128	12/10/10	A9B23079
Temperature Calibration Bath TC-231	A79341		
Temperature Probe	3039	12/10/10	A9B23080-1
Temperature Calibration Bath TC-218	A73332		
Thermistor Module	A27129	7/09/10	1000264338
Temperature Probe	5202	3/11/11	B0310050
Temperature Calibration Bath TC-255	B01375		
Temperature Probe	157	7/27/10	A9708011-4

Certificate Information:

Technician: 68 Procedure: CAL-06 Cal Date: 5/17/10 Cal Due: 5/17/12
Test Conditions: 23.5°C 47.0 %RH 1017 mBar

Calibration Data: (New Instrument)

Unit(s)	Nominal	As Found	In Tol	Nominal	As Left	In Tol	Min	Max	±uc	TUR
°C		N.A.		0.002	0.001	Y	-0.048	0.052	0.013	3.8:1
°C		N.A.		25.001	24.998	Y	24.951	25.051	0.013	3.8:1
°C		N.A.		60.002	60.003	Y	59.952	60.052	0.018	2.8:1
°C		N.A.		100.000	100.001	Y	99.950	100.050	0.013	3.8:1

This Instrument was calibrated using Instruments Traceable to National Institute of Standards and Technology.

A Test Uncertainty Ratio of at least 4:1 is maintained unless otherwise stated and is calculated using the expanded measurement uncertainty. Uncertainty evaluation includes the instrument under test and is calculated in accordance with the ISO "Guide to the Expression of Uncertainty in Measurement" (GUM). The uncertainty represents an expanded uncertainty using a coverage factor k=2 to approximate a 95% confidence level. In tolerance conditions are based on test results falling within specified limits with no reduction by the uncertainty of the measurement. The results contained herein relate only to the item calibrated. This certificate shall not be reproduced except in full, without written approval of Control Company.

Nominal=Standard's Reading, As Left=Instrument's Reading, In Tol=In Tolerance, Min/Max=Acceptance Range, ±uc=Expanded Measurement Uncertainty, TUR=Test Uncertainty Ratio, Accuracy=±(Max-Min)/2, Min = Nominal(Rounded) - Tolerance, Max = Nominal(Rounded) + Tolerance, Date=MM/DD/YY

Nicol Rodriguez
Nicol Rodriguez, Quality Manager

Wallace Berry
Wallace Berry, Technical Manager

Maintaining Accuracy:

In our opinion once calibrated your Digital Thermometer should maintain its accuracy. There is no exact way to determine how long calibration will be maintained. Digital Thermometers change little, if any at all, but can be affected by aging, temperature, shock, and contamination.

Recalibration:

For factory calibration and re-certification traceable to National Institute of Standards and Technology contact Control Company.

CONTROL COMPANY 4455 Rex Road Friendswood, TX 77546 USA
Phone 281 482-1714 Fax 281 482-9448 service@control3.com www.control3.com

Control Company is an ISO 17025:2005 Calibration Laboratory Accredited by (A2LA) American Association for Laboratory Accreditation, Certificate No. 1750.01
Control Company is ISO 9001:2008 Quality Certified by (DNV) Det Norske Veritas, Certificate No. CERT-01805-2008-AQ-HOU-ANAB
International Laboratory Accreditation Cooperation (ILAC) - Multilateral Recognition Arrangement (MRA).

Alcotest 7110 Calibration Record

Equipment Alcotest 7110 MKIII-C Serial No.: ARUL-0061
Location: EVESHAM TOWNSHIP P.D.
Calibration File No.: 00925 Calib. Date: 06/27/2011 Calib. No.: 00013
Certification File No.: 00839 Cert. Date: 01/11/2011 Cert. No.: 00009
Linearity File No.: 00840 Lin. Date: 01/11/2011 Lin. No.: 00009
Solution File No.: 00917 Soln. Date: 06/13/2011 Soln. No.: 00097
Sequential File No.: 00925 File Date: 06/27/2011

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDUN S3-0311
Control Solution %: 0.100% Expires: 06/14/2012
Solution Control Lot: 10F080 Bottle No.: 1392


Coordinator

Last Name: WEYMAN First Name: HAROLD MI: -

Signature: Det. H. Weyman #6289 Badge No.: 6289
Date: 06/27/2011

*Black Key Temperature Probe Serial.....# DDWAP2 - 0019 H.W.

*Digital NIST Temperature Measuring System Serial.....# 101685688 H.W.

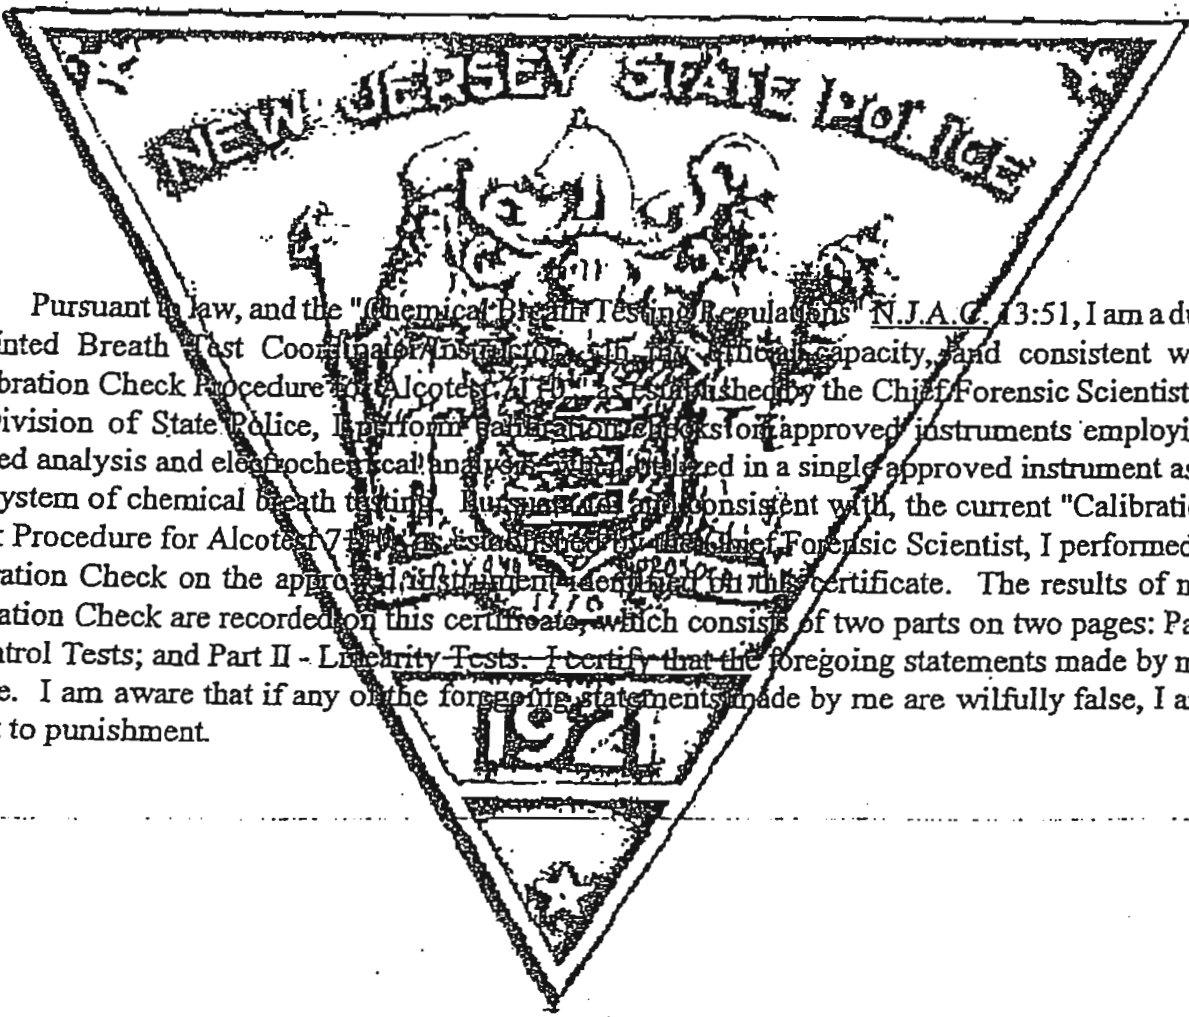

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Inspector, in my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis which are calibrated in a single approved instrument as a dual system of chemical breath testing. Pursuant to and consistent with, the current "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part I - Control Tests

Equipment	Alcotest 7110 MKIII-C	Serial No.:	ARUL-0061
Location:	EVESHAM TOWNSHIP P.D.		
Calibration File No.:	00925	Calib. Date:	06/27/2011
Certification File No.:	00926	Cert. Date:	06/27/2011
Linearity File No.:	00840	Lin. Date:	01/11/2011
Solution File No.:	00917	Soln. Date:	06/13/2011
Sequential File No.:	00926	File Date:	06/27/2011
Calibrating Unit:	WET	Model No.:	CU-34
Control Solution %:	0.100%	Serial No.:	DDUN S3-0311
Solution Control Lot:	10F080	Expires:	06/14/2012
		Bottle No.:	1392

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	10:41D		
Control 1 EC	0.099%	10:41D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.099%	10:41D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:42D		
Control 2 EC	0.099%	10:43D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.099%	10:43D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:43D		
Control 3 EC	0.099%	10:44D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.099%	10:44D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:44D		

All tests within acceptable tolerance.

Coordinator

Last Name: WEYMAN

First Name: HAROLD

MI

Signature:



Badge No. 0097

Date: 06/27/2011

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Inspector, in my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to and consistent with, the current "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part II - Linearity Tests

Equipment Alcotest 7110 MKIII-C Serial No.: ARUL-0061
Location: EVESHAM TOWNSHIP P.D.
Calibration File No.: 00925 Calib. Date: 06/27/2011 Calib. No.: 00013
Certification File No.: 00926 Cert. Date: 06/27/2011 Cert. No.: 00010
Linearity File No.: 00927 Lin. Date: 06/27/2011 Lin. No.: 00010
Solution File No.: 00917 Soln. Date: 06/13/2011 Soln. No.: 00097
Sequential File No.: 00927 File Date: 06/27/2011

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDMK S3-0003
Control Solution %: 0.040% Expires: 01/12/2012
Solution Control Lot: 10A073 Bottle No.: 0370

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDAE-0024
Control Solution %: 0.080% Expires: 01/15/2012
Solution Control Lot: 10A074 Bottle No.: 0895

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDRF S3-0009
Control Solution %: 0.160% Expires: 01/21/2012
Solution Control Lot: 10A075 Bottle No.: 1219

Function	Result %BAC	Time HH:MM	Temperature Simulator (°C)	Comment(s) or Error(s)
Ambient Air Blank	0.000%	11:09D		
Control 1 EC	0.040%	11:10D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.038%	11:10D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:11D		
Control 2 EC	0.039%	11:12D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.038%	11:12D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:13D		
Control 3 EC	0.080%	11:14D	33.9°C	*** TEST PASSED ***
Control 3 IR	0.079%	11:14D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:16D		
Control 4 EC	0.079%	11:16D	34.0°C	*** TEST PASSED ***
Control 4 IR	0.079%	11:16D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:18D		
Control 5 EC	0.158%	11:18D	33.8°C	*** TEST PASSED ***
Control 5 IR	0.159%	11:18D	33.8°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:20D		
Control 6 EC	0.157%	11:20D	34.0°C	*** TEST PASSED ***
Control 6 IR	0.158%	11:20D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:22D		


All tests within acceptable tolerance.

Coordinator

Last Name: WEYMAN

First Name: HAROLD

MI: -

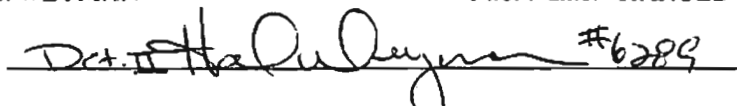Signature: 

Badge No.: 6289

Date: 06/27/2011

DEPARTMENT OF
Law and Public Safety
 This is to certify that

Harold Weyman
 New Jersey State Police


QUALIFIED AND EMPLOYED TO CONDUCT CHEMICAL BREATH ANALYSIS PURSUANT TO CHAPTER 142 OF
 THE LAWS OF 1994 BY THE OPERATION OF THE ALCOTEST 7110 MKIII-C
 METHOD TO DETERMINE INTOXICATION.
 TESTED BY NAME AT TRENTON, NEW JERSEY THIS 30th DAY OF MAY
 19 THOUSAND AND EIGHT

[Signature]
 SUPERINTENDENT
 NEW JERSEY STATE POLICE

[Signature]
 ATTORNEY GENERAL
 STATE OF NEW JERSEY

ORIGINAL COURSE DATES

DATE	Refresher Course PLACE	INSTRUCTOR
10/25/10	ALSO	Adam Stambler

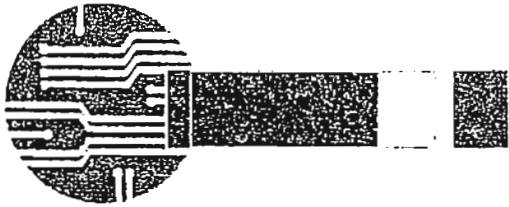

CERTIFICATE

This is to certify that


Harold Weyman
Detective, #6289

has successfully completed the two day Draeger Safety Diagnostics, Inc. Alcohol Coordinator Training Course on the New Jersey specific Alcotest® 7110 MKIII-C and is hereby certified as a qualified

**Operator Trainer and
Maintenance Technician**

Completion of this course qualifies this individual to train and certify Operators in the proper use and operation as well as perform Preventive Maintenance on the New Jersey specific Alcotest® 7110 MKIII-C.

Date: September 18, 2008

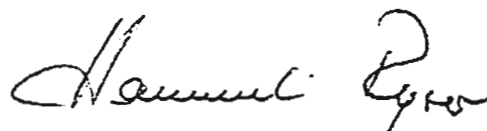

Instructor: Hansueli Ryser


Dräger

DEPARTMENT OF
Traffic and Public Safety
This is to certify that

Harold Weyman
New Jersey State Police

QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL BREATH ANALYSES PURSUANT TO CHAPTER 141 OF
THE LAWS OF 1966 IN THE OPERATION OF THE Breath Test Coordinator/Instructor
METHOD TO DETERMINE INTOXICATION
WITH UNDER MY HAND AT TRENTON, NEW JERSEY THIS 5th DAY OF November
FOUR THOUSAND AND Eight


SUPERINTENDENT
NEW JERSEY STATE POLICE

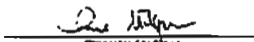
ATTORNEY GENERAL
STATE OF NEW JERSEY

ORIGINAL COURSE DATES _____

DATE	Refresher Course PLACE	INSTRUCTOR
10/25/10	ALSO	Adam Standa

ORIGINAL COURSE DATES

	DATE	Refresher Course PLACE	INSTRUCTOR
1.	_____	_____	_____
2.	_____	_____	_____
3.	_____	_____	_____
4.	_____	_____	_____
5.	_____	_____	_____
6.	_____	_____	_____
7.	_____	_____	_____
8.	_____	_____	_____
9.	_____	_____	_____

S.P. 293B (Rev. 03/03)

DEPARTMENT OF
Justice and Public Safety
 This is to certify that

HAROLD WEYMAN

NEW JERSEY STATE POLICE

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL BREATH ANALYSES PURSUANT TO CHAPTER 112 OF

THE LAWS OF 1966 IN THE OPERATION OF THE Breathalyzer

A METHOD TO DETERMINE INTOXICATION

GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY, ON 13th DAY OF August

TWO THOUSAND AND Four

[Signature]
 SUPERINTENDENT
 NEW JERSEY STATE POLICE

[Signature]
 ATTORNEY GENERAL
 STATE OF NEW JERSEY



JON S. CORZINE
Governor

State of New Jersey
OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
PO Box 080
TRENTON, NJ 08625-0080

ANNE MILGRAM
Attorney General

November 5, 2008


Col. Joseph R. Fuentes, Superintendent
Division of State Police
Division Headquarters
P.O. Box 7068
West Trenton, New Jersey 08628

Re: Breath Test Coordinator/Instructor, Certification - Trooper Harold Weyman # 6289

Dear Col. Fuentes:

Pursuant to the provisions of *N.J.A.C.* 13:51-2.1 (b) and (c), as adopted and promulgated under the provisions of *N.J.S.A.* 39:4-50.3, 39:3-10.25 and 12:7-56, I hereby approve Trooper Harold Weyman # 6289 as a duly certified Breath Test Coordinator/Instructor. This approval is effective immediately.

Very truly yours,


Anne Milgram
Attorney General

AM:HA:tlh

c: Trooper Harold Weyman # 6289, Alcohol/Drug Test Unit, Division of State Police
Lt. Paul Spirit, Unit Head, Alcohol/Drug Test Unit, Division of State Police

G:\Prosecutor Services\COPROSLETTERS\Weyman Breath Test Ltr 11.5.08.wpd





ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST). The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification. For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

Certification date:

Next Certification due:

DDWAP2-001

February 7, 2011

February 7, 2012

Probe Value

103

Draeger Safety Diagnostics, Inc.
Technical Service Department



State of New Jersey
 OFFICE OF THE ATTORNEY GENERAL
 DEPARTMENT OF LAW AND PUBLIC SAFETY
 DIVISION OF STATE POLICE
 POST OFFICE BOX 7068
 WEST TRENTON NJ 08628-0068
 (609) 882-2000

CHRIS CHRISTIE
 Governor

PAULA T. DOW
 Acting Attorney General

COLONEL JOSEPH R. FUENTES
 Superintendent

CERTIFICATION OF ANALYSIS
0.04 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.045 to 0.051 grams per 100 milliliters of solution.


MANUFACTURER: Drager Safety, Inc. ANALYSIS DATE: 2/2/2010

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 10A073


Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0479 to 0.0481 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is January 12, 2012.

As Assistant Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

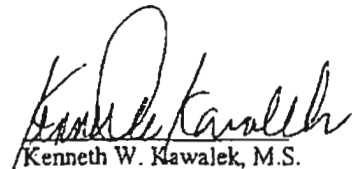
 Kenneth W. Kawalek, M.S.
 Assistant Chief Forensic Scientist
 Division of State Police

Sworn to and subscribed before me this 19th day of February, 2010.

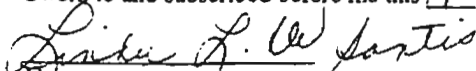
 Notary

Linda L. Desantis
 Notary Public, New Jersey
 Commission Expires 6-17-14



New Jersey Is An Equal Opportunity Employer
 Printed on Recycled Paper and Recyclable





CHRIS CHRISTIE
Governor

State of New Jersey
OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON NJ 08628-0068
(609) 882-2000

PAULA T. DOW
Acting Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.08 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.094 to 0.099 grams per 100 milliliters of solution.

MANUFACTURER: Drager Safety, Inc. ANALYSIS DATE: 2/3/2010

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 10A074

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0954 to 0.0958 grams per 100 milliliters of solution.


This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is January 15, 2012.

As Assistant Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Kenneth W. Kavalek, M.S.
Assistant Chief Forensic Scientist
Division of State Police

Sworn to and subscribed before me this 19th day of February, 2010.

Notary





State of New Jersey
 OFFICE OF THE ATTORNEY GENERAL
 DEPARTMENT OF LAW AND PUBLIC SAFETY
 DIVISION OF STATE POLICE
 POST OFFICE BOX 7068
 WEST TRENTON NJ 08628-0068
 (609) 882-2000

CHRIS CHRISTIE
 Governor

PAULA T. DOW
 Attorney General

KIM GUADAGNO
 Lt. Governor

COLONEL JOSEPH R. FUENTES
 Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.117 to 0.125 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 7/8/2010

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 10F080

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1197 to 0.1207 grams per 100 milliliters of solution.


This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is June 14, 2012.

As Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ajit R. Tungare
 Chief Forensic Scientist
 Division of State Police

Sworn to and subscribed before me this 5th day of July, 2010.

Notary



New Jersey is an Equal Opportunity Employer
 Printed on Recycled Paper and Recyclable





State of New Jersey
 OFFICE OF THE ATTORNEY GENERAL
 DEPARTMENT OF LAW AND PUBLIC SAFETY
 DIVISION OF STATE POLICE
 POST OFFICE BOX 7068
 WEST TRENTON NJ 08628-0068
 (609) 882-2000

CHRIS CHRISTIE
 Governor

PAULA T. DOW
 Acting Attorney General
 COLONEL JOSEPH R. FUENTES
 Superintendent

CERTIFICATION OF ANALYSIS
0.16 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.188 to 0.199 grams per 100 milliliters of solution.


MANUFACTURER: Draper Safety, Inc. ANALYSIS DATE: 2/4/2010

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 10A075


Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1913 to 0.1919 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is January 21, 2012.

As Assistant Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

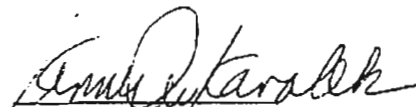
 Kenneth W. Kawalek, M.S.
 Assistant Chief Forensic Scientist
 Division of State Police

Sworn to and subscribed before me this 19th day of February, 2010.

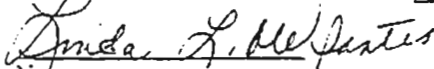
 Notary

Linda L. Desantis
 Notary Public, New Jersey
 My Commission Expires 8-17-14



New Jersey Is An Equal Opportunity Employer
 Printed on Recycled Paper and Recyclable





Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDMK53-0003

Certification Date


Technician

Re-Certification Due Date

February 7, 2011

DM

February 7, 2012

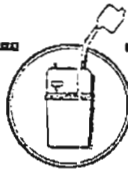

Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Dräger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDAE-0024

Certification Date

6-3-11

Technician

MM

Re-Certification Due Date

6-3-12



Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDRF53-0009

Certification Date

Technician

Re-Certification Due Date

February 7, 2011

DM

February 7, 2012

Calibrating Unit

New Standard Solution Report

Equipment	Alcotest 7110 MKIII-C	Serial No.:	ARUL-0061
Location:	EVESHAM TOWNSHIP P.D.		
Calibration File No.:	00925	Calib. Date:	06/27/2011
Certification File No.:	00926	Cert. Date:	06/27/2011
Linearity File No.:	00927	Lin. Date:	06/27/2011
Solution File No.:	00928	Soln. Date:	06/27/2011
Sequential File No.:	00928	File Date:	06/27/2011

Calibrating Unit:	WET	Model No.:	CU-34	Serial No.:	DDUN S3-0311
Control Solution %:	0.100%			Expires:	03/10/2012
Solution Control Lot:	10C077			Bottle No.:	1012

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	12:29D		
Control 1 EC	0.100%	12:30D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.099%	12:30D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:30D		
Control 2 EC	0.099%	12:31D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.099%	12:31D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:32D		
Control 3 EC	0.099%	12:32D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.099%	12:32D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:33D		

All tests within acceptable tolerance.

On this date, I installed the above indicated "NEW SOLUTION" in accordance with Alcotest 7110 operator training and procedures established by the (NJSP) Chief Forensic Scientist.

Temperature Probe Serial Number: DDUTP2-110 H.W.

Changed By:

Last Name: WEYMAN

First Name: HAROLD

MI: -

Signature: *Det. Harold Weyman #6289*

Badge No.: 6289

Date: 06/27/2011



State of New Jersey
 Office of the Attorney General
 Department of Law and Public Safety
 Division of State Police
 Post Office Box 7058
 West Trenton NJ 08628-0058
 (609) 882-2000

CHRIS CHRISTIE
 Governor

KIM GUADAGNO
 Lt. Governor

PAULA T. DOW
 Attorney General

COLONEL JOSEPH R. FUENTES
 Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.117 to 0.125 grams per 100 milliliters of solution.

MANUFACTURER: Dräger Safety, Inc.


ANALYSIS DATE: 3/24/2010

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 10C077


Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1198 to 0.1202 grams per 100 milliliters of solution.


This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is March 10, 2012

As Assistant Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

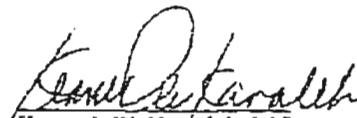
 Kenneth W. Kawalek, M.S.
 Assistant Chief Forensic Scientist
 Division of State Police

Sworn to and subscribed before me this 6th day of April, 2010.

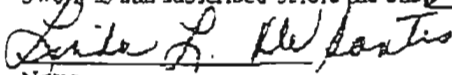
 Notary



New Jersey Is An Equal Opportunity Employer
 Printed on Recycled Paper and Recyclable

