

ALCOTEST CHECKLIST

Municipality: EVE SHAM Alcotest Ser.#: ARUL - 0061
County: BURLINGTON Date of Calibration: 08-20-2014

- ✓ 1. **Certificate of Accuracy Alcotest 7110 MKIII-C** from Draeger Safety for instrument used in the A.I.R.
- ✓ 2. **Certificate of Accuracy CU34 Unit** on Alcotest Instrument used.
Ser. #: DDUN 53-0311
- ✓ 3. **Certificate of Accuracy Alcotest 7110 Temperature Probe** from Draeger Safety for instrument in A.I.R. or equivalent.
Ser. #: DDUJ P2-110
- ✓ 4. **Digital Temperature Measuring System Report of Calibration.**
Ser. #: 130 602 271
- ✓ 5.
 - ✓ A. Alcotest 7110 Calibration Record
 - ✓ B. Alcotest 7110 Calibration Certificate **Part I - Control Tests.**
 - ✓ C. Alcotest 7110 Calibration Certificate **Part II - Linearity Tests.**
 - ✓ D. **Alcotest Card** of operator/coordinator who performed tests.
 - ✓ E. **Certificate of Accuracy Alcotest 7110 Temperature Probe** from Draeger Safety used in the Calibration Tests ["Black Key" probe of Breath Test Coordinator].
Ser. #: DDUN P2-231
- ✓ 6. **Certificates of Analysis** for each **Simulator Solution** used in Calibration/Linearity Tests:

✓ A.	0.04% Solution.	<u>12</u>	<u>H</u>	<u>104</u>
✓ B.	0.08% Solution.	<u>12</u>	<u>H</u>	<u>105</u>
✓ C.	0.10% Solution.	<u>13</u>	<u>I</u>	<u>122</u>
✓ D.	0.16% Solution.	<u>12</u>	<u>I</u>	<u>106</u>
- ✓ 7. Certificate of Accuracy Alcotest CU34 Simulators from Draeger Safety (when conducting the Calibration/Linearity Tests) for:
 - ✓ A. 0.04% used in Calibration/Linearity Testing. DDMK 53-0003
 - ✓ B. 0.08% used in Calibration/Linearity Testing. DDXA 53-0193
 - ✓ C. 0.10% used in Calibration/Linearity Testing DDUN 53-0311 [Same as instrument's CU34 unit].
 - ✓ D. 0.16% used in Calibration/Linearity Testing. DDCN - 0052
- ✓ 8.
 - ✓ A. New Standard Solution Report following Calibration.
 - ✓ B. Calibrating CU34 Unit for same [same as CU34 unit on instrument].
 - ✓ C. Certificate of Analysis 0.10% solution for same.
Lot #: 13 C 111
 - ✓ D. Alcotest card of operator/coordinator who completed change.

Drägersafety

Alcotest[®] 7110 MKIII-C

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest 7110 MKIII-C has been tested for accuracy and found to be in compliance with the National Highway Traffic Safety Administration Standard for evidential breath testing devices. The Alcotest MKIII-C is compliant as a "mobile" and "nonmobile" EBT with 49 FR 48854, 49 FR 48864 and 58 FR 48705. The manufacturer recommends accuracy verification of this instrument within 12 months of the calibration date below, or sooner, according to your State Specifications.


Certification Date:

SERIAL NUMBER:

7-21-2010

ARUL-0061

Draeger Safety Diagnostics, Inc.





Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK II A
- Other: _____

Serial Number:

DDUN53-0311

Certification Date

8-5-14

Technician

BC

Re-Certification Due Date

8-5-15



Dräger

ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST). The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification. For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

DDUS P2-110

Certification date:

8-5-14

Next Certification due:

8-5-15

Probe Value

102

Draeger Safety Diagnostics, Inc.
Technical Service Department

BC



Calibration
Certificate No. 1750.01

Calibration complies with ISO/IEC
17025, ANSI/NCSL Z540-1, and 9001



Cert. No.: 4000-5427014

Traceable® Certificate of Calibration for Digital Thermometer

Manufactured for and distributed by: VWR International, LLC, Radnor Corporate Center, Bldg 1, Ste 200, 100 Matsonford Road, Radnor, PA 19087
Instrument Identification:

Model: 61220-601 S/N: 130602271 Manufacturer: Control Company

Standards/Equipment:

Description	Serial Number	Due Date	NIST Traceable Reference
Temperature Calibration Bath TC-178	A45240		
Thermistor Module	A17118	2/13/14	1000332071
Temperature Probe	128	2/20/14	6-84829-30-1
Temperature Calibration Bath TC-231	A79341		
Thermistor Module	A17118	2/13/14	1000332071
Temperature Probe	3039	2/20/14	6-84829-1-1
Temperature Calibration Bath TC-218	A73332		
Thermistor Module	A27129	11/09/13	1000327261
Temperature Probe	5202	11/30/14	15-815PW-1-1
Temperature Calibration Bath TC-275	B16388		
Digital Thermometer	B16815	8/12/14	1000341967
PRT Temperature Probe	02022	8/14/15	83812004

Certificate Information:

Technician: 68 Procedure: CAL-06 Cal Date: 10/08/13 Cal Due: 10/08/15
Test Conditions: 24.0°C 37.0 %RH 1017 mBar

Calibration Data: (New Instrument)

Unit(s)	Nominal	As Found	In Tol	Nominal	As Left	In Tol	Min	Max	±U	TUR
°C		N.A.		-0.001	0.000	Y	-0.051	0.049	0.013	3.8:1
°C		N.A.		25.001	25.000	Y	24.951	25.051	0.023	2.2:1
°C		N.A.		50.003	50.001	Y	49.953	50.053	0.014	3.6:1
°C		N.A.		100.001	99.994	Y	99.951	100.051	0.018	2.8:1

This instrument was calibrated using instruments traceable to National Institute of Standards and Technology.

A Test Uncertainty Ratio of at least 4:1 is maintained unless otherwise stated and is calculated using the expanded measurement uncertainty. Uncertainty evaluation includes the instrument under test and is calculated in accordance with the ISO "Guide to the Expression of Uncertainty in Measurement" (GUM). The uncertainty represents an expanded uncertainty using a coverage factor k=2 to approximate a 95% confidence level. Tolerance conditions are based on test results falling within specified limits with no reduction by the uncertainty of the measurement. The results contained herein relate only to the item calibrated. This certificate shall not be reproduced except in full, without written approval of Control Company.

Nominal=Standard's Reading; As Left=Instrument's Reading; In Tol=In Tolerance; Min/Max=Acceptance Range; ±U=Expanded Measurement Uncertainty; TUR=Test Uncertainty Ratio; Accuracy=(Max-Min)/2; Min = As Left Nominal(Rounded) - Tolerance; Max = As Left Nominal(Rounded) + Tolerance; Data=MMDDYY

Nicol Rodriguez
Nicol Rodriguez, Quality Manager

Aaron Judice
Aaron Judice, Technical Manager

Maintaining Accuracy:

In our opinion once calibrated your Digital Thermometer should maintain its accuracy. There is no exact way to determine how long calibration will be maintained. Digital Thermometers change little, if any at all, but can be affected by aging, temperature, shock, and contamination.

Recalibration:

For factory calibration and re-certification traceable to National Institute of Standards and Technology contact Control Company.

CONTROL COMPANY 4455 Rex Road Friendswood, TX 77546 USA
Phone 281 482-1714 Fax 281 482-9448 service@control3.com www.control3.com

Control Company is an ISO 17025:2005 Calibration Laboratory Accredited by (A2LA) American Association for Laboratory Accreditation, Certificate No. 1750.01.
Control Company is ISO 9001:2008 Quality Certified by (DNV) Det Norske Veritas, Certificate No. CERT-01805-2008-AD-HOU-RvA.
International Laboratory Accreditation Cooperation (ILAC) - Multilateral Recognition Arrangement (MRA).

Alcotest 7110 Calibration Record

Equipment Alcotest 7110 MKIII-C Serial No.: ARUL-0061
Location: EVESHAM TOWNSHIP P.D.
Calibration File No.: 01402 **Calib. Date:** 08/20/2014 **Calib. No.:** 00020
Certification File No.: 01335 **Cert. Date:** 02/25/2014 **Cert. No.:** 00016
Linearity File No.: 01336 **Lin. Date:** 02/25/2014 **Lin. No.:** 00016
Solution File No.: 01394 **Soln. Date:** 07/27/2014 **Soln. No.:** 00157
Sequential File No.: 01402 **File Date:** 08/20/2014

Calibrating Unit: WET **Model No.:** CU-34 **Serial No.:** DDUN S3-0311
Control Solution %: 0.100% **Expires:** 09/17/2015
Solution Control Lot: 131122 **Bottle No.:** 0758

Coordinator

Last Name: GONCALVES **First Name:** MICHELLE **MI:** L
Signature: Sgt. Michelle Goncalves #6040 **Badge No.:** 6040
Date: 08/20/2014

*Black Key Temperature Probe Serial.....# DDUN P2-231 (MC)

*Digital NIST Temperature Measuring System Serial.....# 130602271 (MC)

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 17:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to, and consistent with, the current "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part I - Control Tests

Equipment Alcotest 7110 MKIII-C Serial No.: ARUL-0061
Location: EVESHAM TOWNSHIP P.D.
Calibration File No.: 01402 **Calib. Date:** 08/20/2014 **Calib. No.:** 00020
Certification File No.: 01403 **Cert. Date:** 08/20/2014 **Cert. No.:** 00017
Linearity File No.: 01336 **Lin. Date:** 02/25/2014 **Lin. No.:** 00016
Solution File No.: 01394 **Soln. Date:** 07/27/2014 **Soln. No.:** 00157
Sequential File No.: 01403 **File Date:** 08/20/2014

Calibrating Unit: WET **Model No.:** CU-34 **Serial No.:** DDUN S3-0311
Control Solution %: 0.100% **Expires:** 09/17/2015
Solution Control Lot: 13I122 **Bottle No.:** 0758

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	10:50D		
Control 1 EC	0.099%	10:51D	33.9°C	*** TEST PASSED ***
Control 1 IR	0.101%	10:51D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:52D		
Control 2 EC	0.099%	10:52D	33.9°C	*** TEST PASSED ***
Control 2 IR	0.100%	10:52D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:53D		
Control 3 EC	0.099%	10:53D	33.9°C	*** TEST PASSED ***
Control 3 IR	0.099%	10:53D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:54D		

All tests within acceptable tolerance.

Coordinator

Last Name: GONCALVES

First Name: MICHELLE

MI: L

Signature: 

Badge No.: 6040

Date: 08/20/2014

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to, and consistent with, the current "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part II - Linearity Tests

Equipment Alcotest 7110 MKIII-C Serial No.: ARUL-0061
Location: EVESHAM TOWNSHIP P.D.
Calibration File No.: 01402 **Calib. Date:** 08/20/2014 **Calib. No.:** 00020
Certification File No.: 01403 **Cert. Date:** 08/20/2014 **Cert. No.:** 00017
Linearity File No.: 01404 **Lin. Date:** 08/20/2014 **Lin. No.:** 00017
Solution File No.: 01394 **Soln. Date:** 07/27/2014 **Soln. No.:** 00157
Sequential File No.: 01404 **File Date:** 08/20/2014

Calibrating Unit: WET **Model No.:** CU-34 **Serial No.:** DDMK S3-0003
Control Solution %: 0.040% **Expires:** 08/24/2014
Solution Control Lot: 12H104 **Bottle No.:** 0596

Calibrating Unit: WET **Model No.:** CU-34 **Serial No.:** DDXD S3-0193
Control Solution %: 0.080% **Expires:** 08/27/2014
Solution Control Lot: 12H105 **Bottle No.:** 0752

Calibrating Unit: WET **Model No.:** CU-34 **Serial No.:** DDCN-0052
Control Solution %: 0.160% **Expires:** 09/10/2014
Solution Control Lot: 12I106 **Bottle No.:** 0374

Function	Result %BAC	Time HH:MM	Temperature Simulator (°C)	Comment(s) or Error(s)
Ambient Air Blank	0.000%	11:07D		
Control 1 EC	0.041%	11:07D	33.9°C	*** TEST PASSED ***
Control 1 IR	0.038%	11:07D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:09D		
Control 2 EC	0.041%	11:09D	33.9°C	*** TEST PASSED ***
Control 2 IR	0.039%	11:09D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:10D		
Control 3 EC	0.081%	11:11D	33.9°C	*** TEST PASSED ***
Control 3 IR	0.080%	11:11D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:12D		
Control 4 EC	0.080%	11:13D	34.0°C	*** TEST PASSED ***
Control 4 IR	0.080%	11:13D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:14D		
Control 5 EC	0.160%	11:15D	33.9°C	*** TEST PASSED ***
Control 5 IR	0.161%	11:15D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:16D		
Control 6 EC	0.158%	11:17D	33.9°C	*** TEST PASSED ***
Control 6 IR	0.161%	11:17D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:18D		

All tests within acceptable tolerance.

Coordinator

Last Name: GONCALVES

First Name: MICHELLE

MI: L

Signature: 

Badge No.: 6040

Date: 08/20/2014

DEPARTMENT OF
Traffic and Public Safety
 What is to be certified that

Michelle L. Gonçalves
 New Jersey State Police

IN COMPLIANCE WITH THE PROVISIONS OF THE NEW JERSEY MOTOR VEHICLE ACT AND THE NEW JERSEY MOTOR VEHICLE REGULATION ACT, THE STATE POLICE HAS DETERMINED THAT THE COURSE IS NEARLY IDENTICAL TO THE COURSE LISTED IN THE NEW JERSEY MOTOR VEHICLE REGULATION ACT, SECTION 17-27.12(b) AND THE NEW JERSEY MOTOR VEHICLE ACT, SECTION 17-27.12(b).

7118 MOKII-C

25th day of December

Twelve

[Signature]
 SUPERVISOR
 NEW JERSEY STATE POLICE

[Signature]
 CHIEF OF POLICE
 NEW JERSEY STATE POLICE

ORIGINAL COURSE DATES

DATE	Refresher Course PLACE	INSTRUCTOR
1. 12-3-13	CCPA	Jim Lora
2.		
3.		
4.		
5.		
6.		
7.		
8.		
9.		

S.P. 2028 (Rev. 03/10)

DEPARTMENT OF
Traffic and Public Safety
 What is to be certified that

Michelle Gonçalves
 New Jersey State Police

IN COMPLIANCE WITH THE PROVISIONS OF THE NEW JERSEY MOTOR VEHICLE ACT AND THE NEW JERSEY MOTOR VEHICLE REGULATION ACT, THE STATE POLICE HAS DETERMINED THAT THE COURSE IS NEARLY IDENTICAL TO THE COURSE LISTED IN THE NEW JERSEY MOTOR VEHICLE REGULATION ACT, SECTION 17-27.12(b) AND THE NEW JERSEY MOTOR VEHICLE ACT, SECTION 17-27.12(b).

23rd day of March

Twelve

[Signature]
 SUPERVISOR
 NEW JERSEY STATE POLICE

[Signature]
 CHIEF OF POLICE
 NEW JERSEY STATE POLICE

ORIGINAL COURSE DATES

DATE	Refresher Course PLACE	INSTRUCTOR
1.		
2.		
3.		
4.		
5.		
6.		
7.		
8.		
9.		

S.P. 2028 (Rev. 03/10)



CHRIS CHRISTIE
Governor

KIM GUADAGNO
Lieutenant Governor

State of New Jersey
OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF CRIMINAL JUSTICE
PO BOX 085
TRENTON, NJ 08625-0085
TELEPHONE: (609) 984-6500

JEFFREY S. CHIESA
Attorney General

STEPHEN J. TAYLOR
Director

March 23, 2012

Col. Joseph R. Fuentes, Superintendent
Division of State Police
Division Headquarters
P.O. Box 7068
West Trenton, New Jersey 08628

Re: Breath Test Coordinator/Instructor, Certification -
Detective I Michelle L. Goncalves #6040

Dear Col. Fuentes:

Pursuant to the provisions of *N.J.A.C.* 13:51-2.1 (b) and (c), as adopted and promulgated under the provisions of *N.J.S.A.* 39:4-50.3, 39:3-10.25 and 12:7-56, I hereby approve Detective I Michelle L. Goncalves #6040, as a duly certified Breath Test Coordinator/Instructor. This approval is effective immediately.

Very truly yours,

Jeffrey S. Chiesa
Attorney General

- c. Detective I Michelle L. Goncalves, Alcohol/Drug Test Unit, Division of State Police
DSFC Patrick Guilfooy, Unit Head, Alcohol/Drug Test Unit, Division of State Police





CERTIFICATE

This is to certify that


Michelle Goncalves

has successfully completed the two day Draeger Safety Diagnostics, Inc. Alcohol Coordinator Training Course on the New Jersey specific Alcotest® 7110 MKIII-C and is hereby certified as a qualified

**Operator Trainer and
Maintenance Technician**

Completion of this course qualifies this individual to train and certify Operators in the proper use and operation as well as perform Preventive Maintenance on the New Jersey specific Alcotest® 7110 MKIII-C.

Date: March 14, 2012

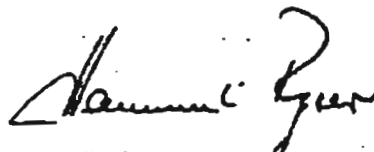

Instructor: Hansueli Ryser

Dräger



State of New Jersey

OFFICE OF THE ATTORNEY GENERAL

DEPARTMENT OF LAW AND PUBLIC SAFETY

DIVISION OF STATE POLICE

POST OFFICE BOX 7068

WEST TRENTON, NJ 08628-0068

(609) 882-2000

CHRIS CHRISTIE
Governor

JEFFREY S. CHIESA
Attorney General

KIM GUADAGNO
Lt. Governor

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.04 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.0469 to 0.0499 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 9/26/2012

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 12H104

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0487 to 0.0491 grams per 100 milliliters of solution.


This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is August 24, 2014.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ali M. Alaouie, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 5th day of October, 2012.

Notary



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 882-2000

CHRIS CHRISTIE
Governor

KIM GUADAGNO
Lt. Governor

JEFFREY S. CHIESA
Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.08 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.0939 to 0.0997 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 9/27/2012

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 12H105

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0967 to 0.0976 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is August 27, 2014.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

[Handwritten signature of Ali M. Alaonic]

Ali M. Alaonic, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 5th day of October, 2012.

[Handwritten signature of Notary]

Urish L. Desantis
Notary Public, New Jersey
My Commission Expires 8-17-14



"An Internationally Accredited Agency"
New Jersey is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





State of New Jersey
OFFICE OF THE ATTORNEY GENERAL

DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 882-2000

CHRIS CHRISTIE
Governor

KIM GUADAGNO
Lt. Governor

JOHN J. HOFFMAN
Acting Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1174 to 0.1246 grams per 100 milliliters of solution.

MANUFACTURER: Dräger Safety, Inc.

ANALYSIS DATE: 10/23/2013

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 131122

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1212 to 0.1222 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is September 17, 2015.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ali M. Alaoui, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 20th day of October, 2013.

Linda L. W. Partis
Notary



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





State of New Jersey
OFFICE OF THE ATTORNEY GENERAL

DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 882-2000

CHRIS CHRISTIE
Governor

JEFFREY S. CHIESA
Attorney General

KIM GUADAGNO
Lt. Governor

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.16 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1878 to 0.1994 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 10/2/2012

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 12I106

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1922 to 0.1932 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is September 10, 2014.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ali M. Alaoui, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 5th day of October, 2012.

Notary



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

Model: ALCOTEST® CU34

Model: MARK IIA

Other: _____

Serial Number:

DDXDS3-0193

Certification Date

1-22-14

Technician

BC

Re-Certification Due Date

1-22-15



Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

Model: ALCOTEST® CU34

Model: MARK IIA

Other: _____

Serial Number:

DDMK33-0003

Certification Date

1-23-14

Technician

BC

Re-Certification Due Date

1-23-15



Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Dräger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDCN-0052

Certification Date

10-1-13

Technician

BC

Re-Certification Due Date

10-1-14

Dräger

ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST). The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification. For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

DDUN P2-231

Certification date:

1-21-14

Next Certification due:

1-21-15

Probe Value

106

Dräger Safety Diagnostics, Inc.
Technical Service Department

BC

Calibrating Unit

New Standard Solution Report

Equipment	Alcotest 7110 MKIII-C	Serial No.: ARUL-0061
Location:	EVESHAM TOWNSHIP P.D.	
Calibration File No.:	01402	Calib. Date: 08/20/2014
Certification File No.:	01403	Calib. No.: 00020
Linearity File No.:	01404	Cert. Date: 08/20/2014
Solution File No.:	01405	Cert. No.: 00017
Sequential File No.:	01405	Lin. Date: 08/20/2014
		Lin. No.: 00017
		Soln. Date: 08/20/2014
		Soln. No.: 00158
		File Date: 08/20/2014
Calibrating Unit:	WET	Model No.: CU-34
Control Solution %:	0.100%	Serial No.: DDUN S3-0311
Solution Control Lot:	13C111	Expires: 03/12/2015
		Bottle No.: 0008

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	12:32D		
Control 1 EC	0.101%	12:33D	33.9°C	*** TEST PASSED ***
Control 1 IR	0.101%	12:33D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:34D		
Control 2 EC	0.100%	12:34D	33.9°C	*** TEST PASSED ***
Control 2 IR	0.100%	12:34D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:35D		
Control 3 EC	0.100%	12:36D	33.9°C	*** TEST PASSED ***
Control 3 IR	0.100%	12:36D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:36D		

All tests within acceptable tolerance.

On this date, I installed the above indicated "NEW SOLUTION" in accordance with Alcotest 7110 operator training and procedures established by the (NJSP) Chief Forensic Scientist.

Temperature Probe Serial Number: DDUJ2 -110 me

Changed By:

Last Name: GONCALVES

First Name: MICHELLE

MI: L

Signature: Sgt. Michelle Goncalves #6040

Badge No.: 6040

Date: 08/20/2014



State of New Jersey

OFFICE OF THE ATTORNEY GENERAL

DEPARTMENT OF LAW AND PUBLIC SAFETY

DIVISION OF STATE POLICE

POST OFFICE BOX 7068

WEST TRENTON, NJ 08628-0068

(609) 882-2000

CHRIS CHRISTIE

Governor

KIM GUADAGNO

Lt. Governor

JEFFREY S. CHIESA

Attorney General

COLONEL JOSEPH R. FUENTES

Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1174 to 0.1246 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 4/4/2013

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 13C111

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1225 to 0.1232 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is March 12, 2015.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

[Handwritten signature of Ali M. Alaouic]

Ali M. Alaouic, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 9th day of April, 2013.

[Handwritten signature of Notary]
Notary



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable

