

ALCOTEST CHECKLIST

Municipality: FLORENCE TWP. Alcotest Ser. #: ARTN-0053

County: BURLINGTON Date of Calibration: 06-12-2014

- 1. **Certificate of Accuracy Alcotest 7110 MKIII-C** from Draeger Safety for instrument used in the A.I.R.
- 2. **Certificate of Accuracy CU34 Unit** on Alcotest Instrument used.
Ser. #: DDUM S3-0222
- 3. **Certificate of Accuracy Alcotest 7110 Temperature Probe** from Draeger Safety for instrument in A.I.R. or equivalent.
Ser. #: DDWI P2-293
- 4. **Digital Temperature Measuring System Report of Calibration.**
Ser. #: 130 602 271
- 5.
 - A. Alcotest 7110 Calibration Record
 - B. Alcotest 7110 Calibration Certificate **Part I - Control Tests.**
 - C. Alcotest 7110 Calibration Certificate **Part II - Linearity Tests.**
 - D. **Alcotest Card** of operator/coordinator who performed tests.
 - E. **Certificate of Accuracy Alcotest 7110 Temperature Probe** from Draeger Safety used in the Calibration Tests ["Black Key" probe of Breath Test Coordinator].
Ser. #: DDXK P2-398
- 6. **Certificates of Analysis** for each **Simulator Solution** used in Calibration/Linearity Tests:

<input checked="" type="checkbox"/> A.	0.04% Solution.	<u>12</u>	<u>H</u>	<u>104</u>
<input checked="" type="checkbox"/> B.	0.08% Solution.	<u>12</u>	<u>H</u>	<u>105</u>
<input checked="" type="checkbox"/> C.	0.10% Solution.	<u>13</u>	<u>B</u>	<u>110</u>
<input checked="" type="checkbox"/> D.	0.16% Solution.	<u>12</u>	<u>I</u>	<u>106</u>
- 7. Certificate of Accuracy Alcotest CU34 Simulators from Draeger Safety (when conducting the Calibration/Linearity Tests) for:
 - A. 0.04% used in Calibration/Linearity Testing. DDMK S3-0003
 - B. 0.08% used in Calibration/Linearity Testing. DDXD S3-0193
 - C. 0.10% used in Calibration/Linearity Testing DDUM S3-0222
[Same as instrument's CU34 unit].
 - D. 0.16% used in Calibration/Linearity Testing. DDWF S3-0241
- 8.
 - A. New Standard Solution Report following Calibration.
 - B. Calibrating CU34 Unit for same [same as CU34 unit on instrument].
 - C. Certificate of Analysis 0.10% solution for same.
Lot #: 12 K 108
 - D. Alcotest card of operator/coordinator who completed change.

06-18-2014



Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249 12/19/94 Notices)

Dräger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDUMS3-0222

Certification Date


5-2-14

Technician

BC

Re-Certification Due Date

5-2-15

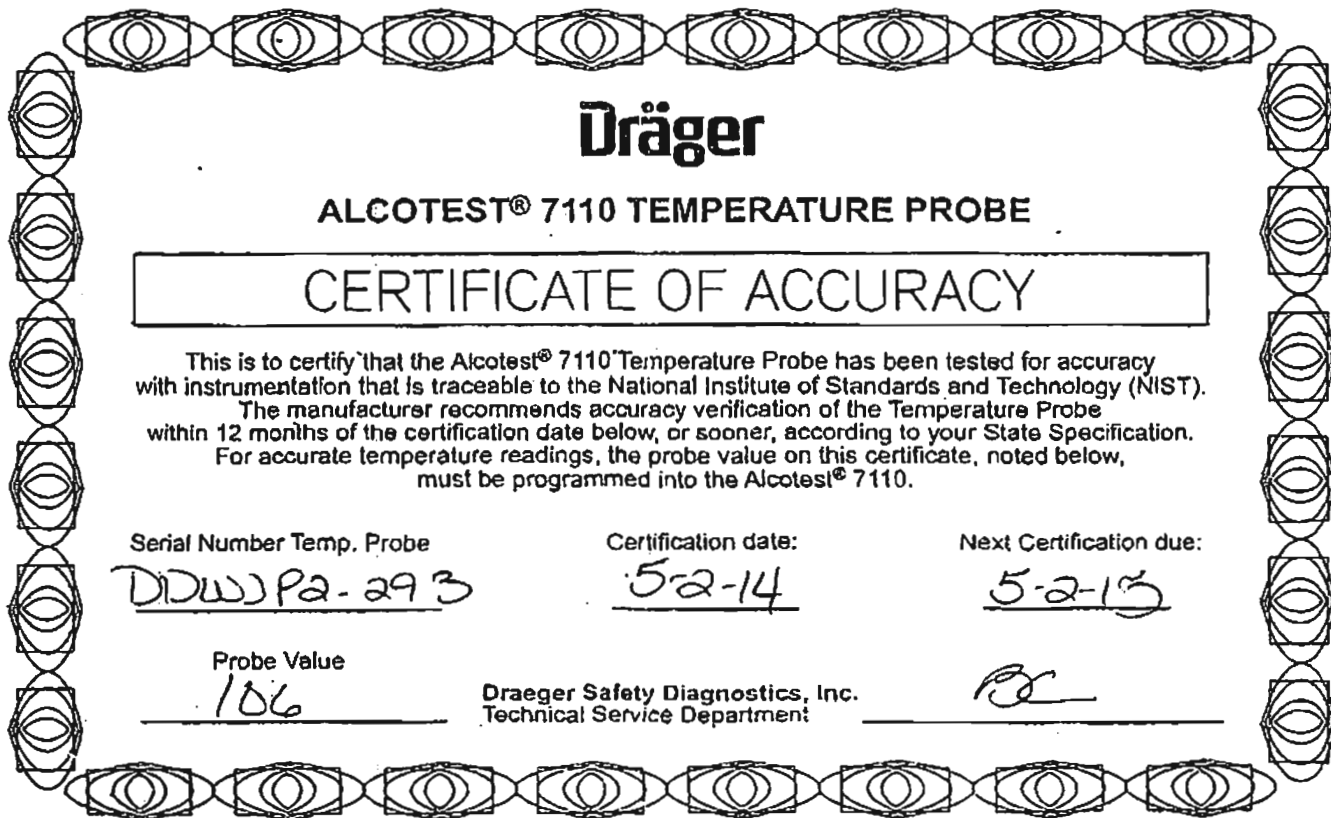

Dräger

ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST).

The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification.

For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

DDWJPa-293

Certification date:

5-2-14

Next Certification due:

5-2-15

Probe Value

106

Dräger Safety Diagnostics, Inc.
Technical Service Department

BC



Calibration
Certificate No. 1750.01

Calibration complies with ISO/IEC
17025, ANSI/NCSL Z540-1, and 9001



Cert. No.: 4000-5427014

Traceable® Certificate of Calibration for Digital Thermometer

Manufactured for and distributed by: VWR International, LLC, Radnor Corporate Center, Bldg 1, Ste 200, 100 Matsonford Road, Radnor, PA 19087
Instrument Identification:

Model: 61220-601 S/N: 130802271 Manufacturer: Control Company

Standards/Equipment:

Description	Serial Number	Due Date	NIST Traceable Reference
Temperature Calibration Bath TC-179	A45240		
Thermistor Module	A17118	2/13/14	1000332071
Temperature Probe	128	2/20/14	6-B4829-30-1
Temperature Calibration Bath TC-231	A79341		
Thermistor Module	A17118	2/13/14	1000332071
Temperature Probe	3039	2/20/14	6-B4829-1-1
Temperature Calibration Bath TC-218	A73332		
Thermistor Module	A27129	11/09/13	1000327281
Temperature Probe	S202	11/30/14	15-B15PW-1-1
Temperature Calibration Bath TC-275	B16388		
Digital Thermometer	B16815	8/12/14	1000341987
PRT Temperature Probe	02022	6/14/15	B3812004

Certificate Information:

Technician: 88 Procedure: CAL-06 Cal Date: 10/08/13 Cal Due: 10/08/15
Test Conditions: 24.0°C 37.0 %RH 1017 mBar

Calibration Data: (New Instrument)

Unit(s)	Nominal	As Found	In Tol	Nominal	As Left	In Tol	Min	Max	±U	TUR
°C		N.A.		-0.001	0.000	Y	-0.051	0.049	0.013	3.8:1
°C		N.A.		25.001	25.000	Y	24.951	25.051	0.023	2.2:1
°C		N.A.		50.003	50.001	Y	49.953	50.053	0.014	3.6:1
°C		N.A.		100.001	99.994	Y	99.951	100.051	0.018	2.8:1

This instrument was calibrated using instruments traceable to National Institute of Standards and Technology.

A Test Uncertainty Ratio of at least 4:1 is maintained unless otherwise stated and is calculated using the expanded measurement uncertainty. Uncertainty evaluation includes the instrument under test and is calculated in accordance with the ISO "Guide to the Expression of Uncertainty in Measurement" (GUM). The uncertainty represents an expanded uncertainty using a coverage factor k=2 to approximate a 95% confidence level. In tolerance conditions are based on test results falling within specified limits with no reduction by the uncertainty of the measurement. The results contained herein relate only to the item calibrated. This certificate shall not be reproduced except in full, without written approval of Control Company.

Nominal-Standard's Reading; As Left-Instrument's Reading; In Tol-In Tolerance; Min/Max-Acceptance Range; ±U-Expanded Measurement Uncertainty; TUR-Test Uncertainty Ratio; Accuracy=±(Max/Min)/2; Min = As Left Nominal(Rounded) - Tolerance; Max = As Left Nominal(Rounded) + Tolerance; Data=64/0/0/0/0

Nicol Rodriguez
Nicol Rodriguez, Quality Manager

Aaron A. Khan
Aaron A. Khan, Technical Manager

Maintaining Accuracy:

In our opinion once calibrated your Digital Thermometer should maintain its accuracy. There is no exact way to determine how long calibration will be maintained. Digital Thermometers change facts, if any at all, but can be affected by aging, temperature, shock, and contamination.

Recalibration:

For factory calibration and re-certification traceable to National Institute of Standards and Technology contact Control Company.

CONTROL COMPANY 4455 Rox Road Friendswood, TX 77646 USA
Phone 281 482-1714 Fax 281 482-9448 service@control3.com www.control3.com

Control Company is an ISO 17025:2005 Calibration Laboratory Accredited by (A2LA) American Association for Laboratory Accreditation, Certificate No. 1750.01.
Control Company is ISO 9001:2008 Quality Certified by (DNV) Det Norske Veritas, Certificate No. CERT-01805-2006-AQ-HOU-RvA.
International Laboratory Accreditation Cooperation (ILAC) - Multilateral Recognition Arrangement (MRA).

Alcotest 7110 Calibration Record


Equipment Alcotest 7110 MKIII-C Serial No.: ARTN-0053
Location: FLORENCE TOWNSHIP P.D.
Calibration File No.: 00704 **Calib. Date:** 06/12/2014 **Calib. No.:** 00024
Certification File No.: 00656 **Cert. Date:** 12/17/2013 **Cert. No.:** 00016
Linearity File No.: 00657 **Lin. Date:** 12/17/2013 **Lin. No.:** 00016
Solution File No.: 00699 **Soln. Date:** 05/25/2014 **Soln. No.:** 00151
Sequential File No.: 00704 **File Date:** 06/12/2014

Calibrating Unit: WET **Model No.:** CU-34 **Serial No.:** DDUM S3-0222
Control Solution %: 0.100% **Expires:** 02/13/2015
Solution Control Lot: 13B110 **Bottle No.:** 0145

Coordinator

Last Name: GONCALVES **First Name:** MICHELLE **MI:** L
Signature: Sgt. Michelle Goncalves #6040 **Badge No.:** 6040
Date: 06/12/2014

*Black Key Temperature Probe Serial.....# DDXK P2-398 (MA)
*Digital NIST Temperature Measuring System Serial.....# 130602271 (MA)

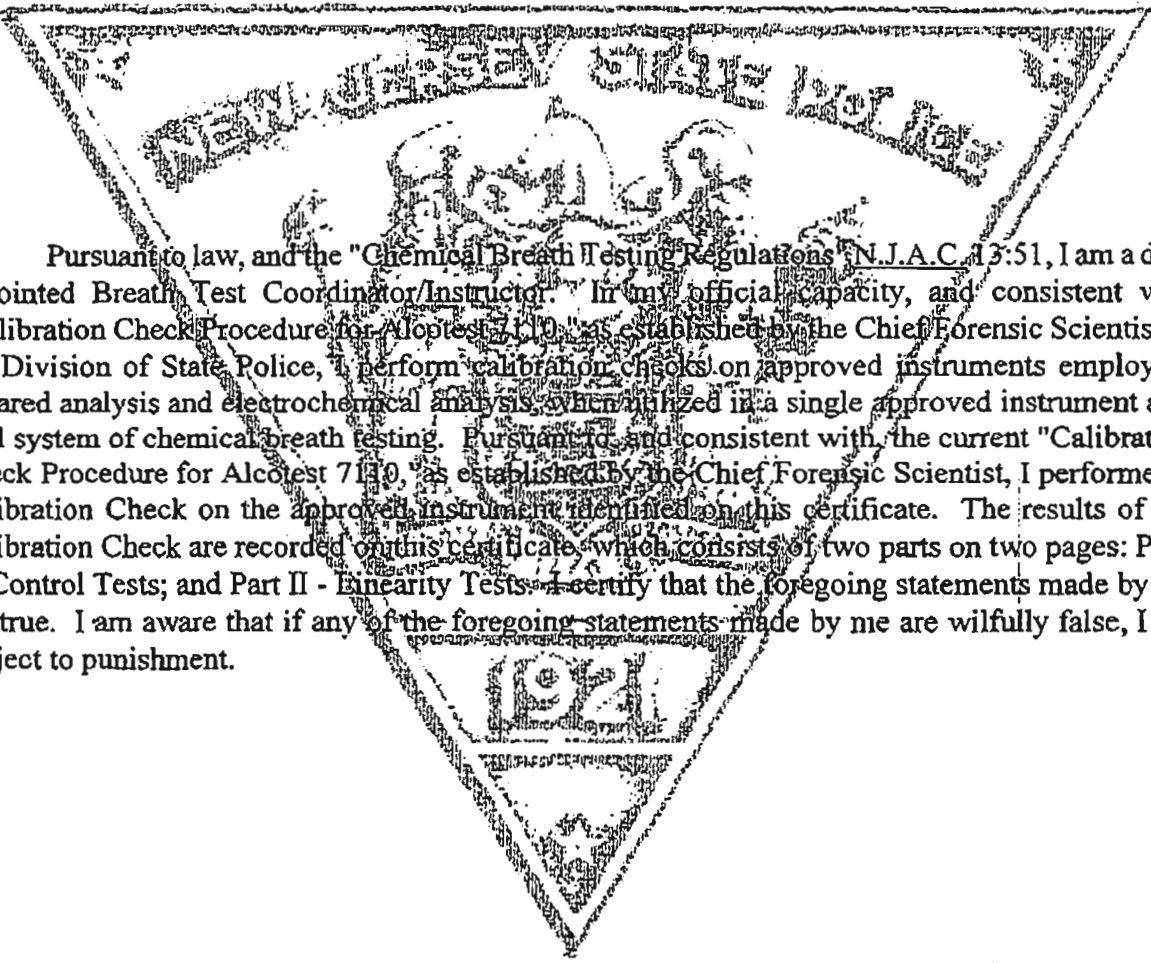

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 17:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to, and consistent with, the current "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part I - Control Tests

Equipment: Alcotest 7110 MKIII-C Serial No.: ARTN-0053
Location: FLORENCE TOWNSHIP P.D.
Calibration File No.: 00704 **Calib. Date:** 06/12/2014 **Calib. No.:** 00024
Certification File No.: 00705 **Cert. Date:** 06/12/2014 **Cert. No.:** 00017
Linearity File No.: 00657 **Lin. Date:** 12/17/2013 **Lin. No.:** 00016
Solution File No.: 00699 **Soln. Date:** 05/25/2014 **Soln. No.:** 00151
Sequential File No.: 00705 **File Date:** 06/12/2014

Calibrating Unit: WET **Model No.:** CU-34 **Serial No.:** DDUM S3-0222
Control Solution %: 0.100% **Expires:** 02/13/2015
Solution Control Lot: 13B110 **Bottle No.:** 0145

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	10:02D		
Control 1 EC	0.099%	10:02D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.100%	10:02D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:03D		
Control 2 EC	0.098%	10:04D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.100%	10:04D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:04D		
Control 3 EC	0.098%	10:05D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.100%	10:05D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:06D		

All tests within acceptable tolerance.

Coordinator

Last Name: GONCALVES

First Name: MICHELLE

MI: L

Signature:

Badge No.: 6040

Date: 06/12/2014

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to, and consistent with, the current "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part II - Linearity Tests

Equipment Alcotest 7110 MKIII-C Serial No.: ARTN-0053
Location: FLORENCE TOWNSHIP P.D.
Calibration File No.: 00704 **Calib. Date:** 06/12/2014 **Calib. No.:** 00024
Certification File No.: 00705 **Cert. Date:** 06/12/2014 **Cert. No.:** 00017
Linearity File No.: 00706 **Lin. Date:** 06/12/2014 **Lin. No.:** 00017
Solution File No.: 00699 **Soln. Date:** 05/25/2014 **Soln. No.:** 00151
Sequential File No.: 00706 **File Date:** 06/12/2014

Calibrating Unit: WET **Model No.:** CU-34 **Serial No.:** DDMK S3-0003
Control Solution %: 0.040% **Expires:** 08/24/2014
Solution Control Lot: 12H104 **Bottle No.:** 0584

Calibrating Unit: WET **Model No.:** CU-34 **Serial No.:** DDXD S3-0193
Control Solution %: 0.080% **Expires:** 08/27/2014
Solution Control Lot: 12H105 **Bottle No.:** 0770

Calibrating Unit: WET **Model No.:** CU-34 **Serial No.:** DDWF S3-0241
Control Solution %: 0.160% **Expires:** 09/10/2014
Solution Control Lot: 12I106 **Bottle No.:** 0355

Function	Result %BAC	Time HH:MM	Temperature Simulator (°C)	Comment(s) or Error(s)
Ambient Air Blank	0.000%	10:22D		
Control 1 EC	0.041%	10:22D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.040%	10:22D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:24D		
Control 2 EC	0.041%	10:24D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.040%	10:24D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:26D		
Control 3 EC	0.081%	10:26D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.080%	10:26D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:28D		
Control 4 EC	0.081%	10:28D	34.0°C	*** TEST PASSED ***
Control 4 IR	0.079%	10:28D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:30D		
Control 5 EC	0.161%	10:30D	34.0°C	*** TEST PASSED ***
Control 5 IR	0.159%	10:30D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:32D		
Control 6 EC	0.161%	10:32D	34.0°C	*** TEST PASSED ***
Control 6 IR	0.158%	10:32D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:34D		

All tests within acceptable tolerance.

Coordinator

Last Name: GONCALVES

First Name: MICHELLE

MI: L

Signature:

Sgt. Michelle Goncalves #6040

Badge No.: 6040

Date: 06/12/2014

**DEPARTMENT OF
Traffic and Public Safety**
Helping to keep the roads safe

Michelle L. Gonçalves
New Jersey State Police

IS QUALIFIED AND COMPETENT TO COORDINATE AND SUPERVISE THE TRAINING AND INSTRUCTION OF OFFICERS AND SERGEANTS IN THE STATE POLICE ACADEMY AND TO SUPERVISE THE TRAINING AND INSTRUCTION OF OFFICERS AND SERGEANTS IN THE STATE POLICE ACADEMY.

7110 MCKIN-C

The 25th day of December

THE TWELFTH DAY OF

Twelve

[Signature]
SUPERVISOR
NEW JERSEY STATE POLICE

[Signature]
ATTESTING OFFICIAL
STATE OF NEW JERSEY

ORIGINAL COURSE DATES

DATE	Refresher Course PLACE	INSTRUCTOR
1. 12-3-13	GC PA	Wm Lora
2.		
3.		
4.		
5.		
6.		
7.		
8.		
9.		

N.J. 2013 (Rev. 01/10)

**DEPARTMENT OF
Traffic and Public Safety**
Helping to keep the roads safe

Michelle Gonçalves
New Jersey State Police

IS QUALIFIED AND COMPETENT TO COORDINATE AND SUPERVISE THE TRAINING AND INSTRUCTION OF OFFICERS AND SERGEANTS IN THE STATE POLICE ACADEMY AND TO SUPERVISE THE TRAINING AND INSTRUCTION OF OFFICERS AND SERGEANTS IN THE STATE POLICE ACADEMY.

33rd

The 23rd day of March

THE TWELFTH DAY OF

Twelve

[Signature]
SUPERVISOR
NEW JERSEY STATE POLICE

[Signature]
ATTESTING OFFICIAL
STATE OF NEW JERSEY

ORIGINAL COURSE DATES

DATE	Refresher Course PLACE	INSTRUCTOR
1.		
2.		
3.		
4.		
5.		
6.		
7.		
8.		
9.		

N.J. 2013 (Rev. 01/10)



CHRIS CHRISTIE
Governor

KIM GUADAGNO
Lieutenant Governor

State of New Jersey
OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF CRIMINAL JUSTICE
PO BOX 085
TRENTON, NJ 08625-0085
TELEPHONE: (609) 984-6300

JEFFREY S. CHIESA
Attorney General

STEPHEN J. TAYLOR
Director

March 23, 2012

Col. Joseph R. Fuentes, Superintendent
Division of State Police
Division Headquarters
P.O. Box 7068
West Trenton, New Jersey 08628

Re: Breath Test Coordinator/Instructor, Certification -
Detective I Michelle L. Goncalves #6040

Dear Col. Fuentes:

Pursuant to the provisions of *N.J.A.C.* 13:51-2.1 (b) and (c), as adopted and promulgated under the provisions of *N.J.S.A.* 39:4-50.3, 39:3-10.25 and 12:7-56, I hereby approve Detective I Michelle L. Goncalves #6040, as a duly certified Breath Test Coordinator/Instructor. This approval is effective immediately.

Very truly yours,

Jeffrey S. Chiesa
Attorney General

- c. Detective I Michelle L. Goncalves, Alcohol/Drug Test Unit, Division of State Police
DSFC Patrick Guilfooy, Unit Head, Alcohol/Drug Test Unit, Division of State Police





CERTIFICATE

This is to certify that


Michelle Goncalves

has successfully completed the two day Draeger Safety Diagnostics, Inc. Alcohol Coordinator Training Course on the New Jersey specific Alcotest® 7110 MKIII-C and is hereby certified as a qualified

**Operator Trainer and
Maintenance Technician**

Completion of this course qualifies this individual to train and certify Operators in the proper use and operation as well as perform Preventive Maintenance on the New Jersey specific Alcotest® 7110 MKIII-C.

Date: March 14, 2012

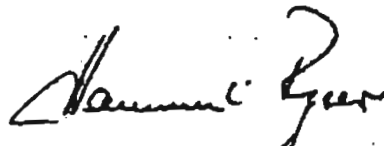

Instructor: Hansueli Ryser

Dräger



State of New Jersey
OFFICE OF THE ATTORNEY GENERAL

DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 862-2000

CHRIS CHRISTIE
Governor

JEFFREY S. CHIESA
Attorney General

KIM GUADAGNO
Lt. Governor

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.04 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.0469 to 0.0499 grams per 100 milliliters of solution.

MANUFACTURER: Dräger Safety, Inc.

ANALYSIS DATE: 9/26/2012

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 12H104

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0487 to 0.0491 grams per 100 milliliters of solution.


This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is August 24, 2014.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ali M. Alaoui, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 5th day of October, 2012.

Luis L. DeLuca
Notary



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





State of New Jersey
 OFFICE OF THE ATTORNEY GENERAL
 DEPARTMENT OF LAW AND PUBLIC SAFETY
 DIVISION OF STATE POLICE
 POST OFFICE BOX 7068
 WEST TRENTON, NJ 08628-0068
 (609) 882-2000

CHRIS CHRISTIE
 Governor

JEFFREY S. CHIESA
 Attorney General

KJM GUADAGNO
 Lt. Governor

COLONEL JOSEPH R. FUENTES
 Superintendent

CERTIFICATION OF ANALYSIS
0.08 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.0939 to 0.0997 grams per 100 milliliters of solution.

MANUFACTURER: Dräger Safety, Inc.


ANALYSIS DATE: 9/27/2012

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 12H105

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0967 to 0.0976 grams per 100 milliliters of solution.


This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is August 27, 2014.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.



Ali M. Alaoui, Ph.D.
 Research Scientist
 NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 5th day of October, 2012.


 Notary

Linda L. Desantis
 Notary Public, New Jersey
 My Commission Expires 8-17-14



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
 Printed on Recycled Paper and Recyclable





State of New Jersey
 OFFICE OF THE ATTORNEY GENERAL
 DEPARTMENT OF LAW AND PUBLIC SAFETY
 DIVISION OF STATE POLICE
 POST OFFICE BOX 7068
 WEST TRENTON, NJ 08628-0068
 (609) 882-2000

CHRIS CHRISTIE
 Governor

KIM GUADAGNO
 Lt. Governor

JEFFREY S. CHIESA
 Attorney General

COLONEL JOSEPH R. FUENTES
 Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1174 to 0.1246 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 3/6/2013

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 13B110

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1234 to 0.1241 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is February 13, 2015.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ali M. Alaoui, Ph.D.
 Research Scientist
 NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 7th day of March, 2013.

Linda R. DeFuria
 Notary



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
 Printed on Recycled Paper and Recyclable





State of New Jersey
 OFFICE OF THE ATTORNEY GENERAL
 DEPARTMENT OF LAW AND PUBLIC SAFETY
 DIVISION OF STATE POLICE
 POST OFFICE BOX 7068
 WEST TRENTON, NJ 08628-0068
 (609) 882-2000

CHRIS CHRISTIE
 Governor

JEFFREY S. CHIESA
 Attorney General

KIM GUADAGNO
 Lt. Governor

COLONEL JOSEPH R. FUENTES
 Superintendent

CERTIFICATION OF ANALYSIS
0.16 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1878 to 0.1994 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 10/2/2012

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 12I106

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1922 to 0.1932 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is September 10, 2014.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ali M. Alaoui, Ph.D.
 Research Scientist
 NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 5th day of October, 2012.

Joseph R. Fuentes
 Notary



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
 Printed on Recycled Paper and Recyclable





Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249 12/19/94 Notices)

Dräger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDWFSS-0241

Certification Date

1-24-14

Technician

BC

Re-Certification Due Date

1-24-15

Dräger

ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST). The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification. For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

DDXKP2-398

Certification date:

8-21-13

Next Certification due:

8-21-14

Probe Value

1.06

Dräger Safety Diagnostics, Inc.
Technical Service Department

BC



Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDX1) S3-0193

Certification Date

1-22-14

Technician

BC

Re-Certification Due Date

1-22-15



Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDM K S3-0003

Certification Date

1-23-14

Technician

BC

Re-Certification Due Date

1-23-15

Calibrating Unit

New Standard Solution Report

Equipment	Alcotest 7110 MKIII-C	Serial No.:	ARTN-0053
Location:	FLORENCE TOWNSHIP P.D.		
Calibration File No.:	00704	Calib. Date:	06/12/2014
Certification File No.:	00705	Cert. Date:	06/12/2014
Linearity File No.:	00706	Lin. Date:	06/12/2014
Solution File No.:	00707	Soln. Date:	06/12/2014
Sequential File No.:	00707	File Date:	06/12/2014
Calibrating Unit:	WET	Model No.:	CU-34
Control Solution %:	0.100%	Serial No.:	DDUM S3-0222
Solution Control Lot:	12K108	Expires:	11/05/2014
		Bottle No.:	1076

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	11:46D		
Control 1 EC	0.100%	11:46D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.099%	11:46D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:47D		
Control 2 EC	0.099%	11:48D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.099%	11:48D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:48D		
Control 3 EC	0.099%	11:49D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.099%	11:49D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:50D		

All tests within acceptable tolerance.

On this date, I installed the above indicated "NEW SOLUTION" in accordance with Alcotest 7110 operator training and procedures established by the (NJSP) Chief Forensic Scientist.

Temperature Probe Serial Number: DDWJPa-293 (MA)

Changed By:

Last Name: GONCALVES First Name: MICHELLE MI: L

Signature: Sgt Michelle Goncalves #6040 Badge No.: 6040

Date: 06/12/2014



State of New Jersey
 OFFICE OF THE ATTORNEY GENERAL
 DEPARTMENT OF LAW AND PUBLIC SAFETY
 DIVISION OF STATE POLICE
 POST OFFICE BOX 7068
 WEST TRENTON, NJ 08628-0068
 (609) 882-2000

CHRIS CHRISTIE
 Governor

JEFFREY S. CHIESA
 Attorney General

KIM GUADAGNO
 Lt. Governor

COLONEL JOSEPH R. FUENTES
 Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1174 to 0.1246 grams per 100 milliliters of solution.

MANUFACTURER: Dräger Safety, Inc.

ANALYSIS DATE: 12/13/2012

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 12K108

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1207 to 0.1218 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is November 05, 2014.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ali M. Alaoui, Ph.D.
 Research Scientist
 NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 21st day of December, 2012.

Lynda K. De Santis
 Notary



"An Internationally Accredited Agency"

New Jersey is An Equal Opportunity Employer
 Printed on Recycled Paper and Recyclable

