


ALCOTEST CHECKLIST

Municipality: FRANKLIN TWP. Alcotest Ser.#: ARWA - 0186

County: GLoucester Date of Calibration: 9-24-09

- 1. **Certificate of Accuracy Alcotest 7110 MKIII-C** from Draeger Safety for instrument used in the A.I.R..
- 2. **Certificate of Accuracy CU34 Unit** on Alcotest Instrument used.
Ser. #: DDWH 53 - 0286
- 3. **Certificate of Accuracy Alcotest 7110 Temperature Probe** from Draeger Safety for instrument in A.I.R. or equivalent.
Ser. #: DDWA P2 - 018
- 4. **Digital Temperature Measuring System Report of Calibration.**
- 5.
 - A. Alcotest 7110 Calibration Record
 - B. Alcotest 7110 Calibration Certificate **Part I - Control Tests.**
 - C. Alcotest 7110 Calibration Certificate **Part II - Linearity Tests.**
 - D. **Alcotest Card** of operator/coordinator who performed tests.
 - E. **Certificate of Accuracy Alcotest 7110 Temperature Probe** from Draeger Safety used in the Calibration Tests ["Black Key" probe of Breath Test Coordinator].
Ser. #: DDWA P2-001
- 6. **Certificates of Analysis** for each **Simulator Solution** used in Calibration/Linearity Tests:

<input checked="" type="checkbox"/> A.	0.04% Solution.	<u>08 F 054</u>
<input checked="" type="checkbox"/> B.	0.08% Solution.	<u>08 F 055</u>
<input checked="" type="checkbox"/> C.	0.10% Solution.	<u>08 G 056</u>
<input checked="" type="checkbox"/> D.	0.16% Solution.	<u>08 G 057</u>
- 7. Certificate of Accuracy Alcotest CU34 Simulators from Draeger Safety (when conducting the Calibration/Linearity Tests) for:
 - A. 0.04% used in Calibration/Linearity Testing. DDMK S3-0003
 - B. 0.08% used in Calibration/Linearity Testing. DDRK S3-0005
 - C. 0.10% used in Calibration/Linearity Testing DDWH S3-0286
[Same as instrument's CU34 unit].
 - D. 0.16% used in Calibration/Linearity Testing. DDRF S3-0009
- 8.
 - A. New Standard Solution Report - following Calibration.
 - B. Calibrating CU34 Unit for same [same as CU34 unit on instrument].
 - C. Certificate of Analysis 0.10% solution for same.
Lot #: 09 A 062
 - D. Alcotest card of operator/coordinator who completed change.

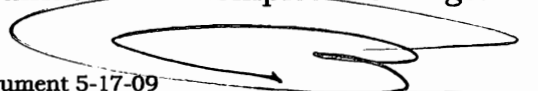

Drägersafety

Alcotest[®] 7110 MKIII-C

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest 7110 MKIII-C has been tested for accuracy and found to be in compliance with the National Highway Traffic Safety Administration Standard for evidential breath testing devices. The Alcotest MKIII-C is compliant as a "mobile" and "nonmobile" EBT with 49 FR 48854, 49 FR 48864 and 58 FR 48705. The manufacturer recommends accuracy verification of this instrument within 12 months of the calibration date below, or sooner, according to your State Specifications.


Certification Date:

03/31/2009

SERIAL NUMBER:

ARWA-0186

Draeger Safety Diagnostics, Inc.

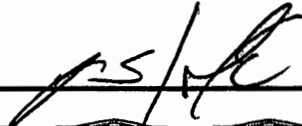

Drägersafety

ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST). The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification. For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

DDWAPR-018

Certification date:

02/23/2009

Next Certification due:

02/23/2010

Probe Value

103

Draeger Safety Diagnostics, Inc.
Technical Service Department

JS



Drägersafety

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

Model: ALCOTEST® CU34

Model: MARK IIA

Other: _____

Serial Number:

DDWH53-0286

Certification Date

02/23/2009

Technician

JS

Re-Certification Due Date

02/23/2010



Calibration
Certificate No. 1750.01

Calibration complies with ISO 9001
ISO/IEC 17025 AND ANSI/NC SL Z540-1



Cert. No.: 4000-2023728

Traceable® Certificate of Calibration for Digital Thermometer

Instrument Identification:

Model: 61220-601 S/N: 80614940 Manufacturer : Control Company

Standards/Equipment:

Description	Serial Number	Due Date	NIST Traceable Reference
Temperature Calibration Bath TC191 Digital Thermometer	A79341 72310620/72310747	7/01/09	4000-1923693
Temperature Calibration Bath TC179 Digital Thermometer	A45240 22136727	5/16/09	4000-1882244
Temperature Probe	149	3/06/09	A82225037-3
Thermistor Module	A17118	11/15/08	A7831032
Temperature Calibration Bath TC218	A73332		

Certificate Information:

Technician: 68 Procedure: CAL-06 Cal Date: 11/04/08 Cal Due: 11/04/10
Test Conditions: 23.5°C 44.0 %RH 1019 mBar

Calibration Data: (New Instrument)

Unit(s)	Nominal	As Found	In Tol	Nominal	As Left	In Tol	Min	Max	±uc	TUR
°C		N.A.		0.001	0.000	Y	-0.049	0.051	0.013	3.8:1
°C		N.A.		25.004	24.999	Y	24.954	25.054	0.013	3.8:1
°C		N.A.		60.001	60.000	Y	59.951	60.051	0.018	2.8:1
°C		N.A.		100.001	99.999	Y	99.951	100.051	0.013	3.8:1

This Instrument was calibrated using Instruments Traceable to National Institute of Standards and Technology.

A Test Uncertainty Ratio of at least 4:1 is maintained unless otherwise stated and is calculated using the expanded measurement uncertainty. Uncertainty evaluation includes the instrument under test and is calculated in accordance with the ISO "Guide to the Expression of Uncertainty in Measurement" (GUM). The uncertainty represents an expanded uncertainty using a coverage factor k=2 to approximate a 95% confidence level. In tolerance conditions are based on test results falling within specified limits with no reduction by the uncertainty of the measurement. The results contained herein relate only to the item calibrated. This certificate shall not be reproduced except in full, without written approval of Control Company.

Nominal=Standard's Reading; As Left=Instrument's Reading; In Tol=In Tolerance; Min/Max=Acceptance Range; ±uc=Measurement Uncertainty; TUR=Test Uncertainty Ratio; Accuracy=±(Max-Min)/2; Date=MM/DD/YY

Wallace Berry
Wallace Berry, Technical Manager

Maintaining Accuracy:

In our opinion once calibrated your Digital Thermometer should maintain its accuracy. There is no exact way to determine how long calibration will be maintained. Digital Thermometers change little, if any at all, but can be affected by aging, temperature, shock, and contamination.

Recalibration:

For factory calibration and re-certification traceable to National Institute of Standards and Technology contact Control Company.

CONTROL COMPANY 4455 Rex Road Friendswood, TX 77546 USA
Phone 281 482-1714 Fax 281 482-9448 service@control3.com www.control3.com

Control Company is an ISO 17025:2005 Calibration Laboratory Accredited by (A2LA) American Association for Laboratory Accreditation, Certificate No. 1750.01.
Control Company is ISO 9001:2000 Quality Certified by (DNV) Det Norske Veritas, Certificate No. CERT-01805-AQ-HOU.
International Laboratory Accreditation Cooperation (ILAC) - Multilateral Recognition Arrangement (MRA).

Alcotest 7110 Calibration Record

Equipment

Alcotest 7110 MKIII-C
Location: FRANKLIN TOWNSHIP P.D.
Serial No.: ARWA-0186
Calibration File No.: 00888
Certification File No.: 00815
Linearity File No.: 00816
Solution File No.: 00880
Sequential File No.: 00888
Calib. Date: 09/24/2009
Cert. Date: 04/08/2009
Lin. Date: 04/08/2009
Soln. Date: 09/04/2009
File Date: 09/24/2009
Calib. No.: 00010
Cert. No.: 00006
Lin. No.: 00006
Soln. No.: 00083

Calibrating Unit: WET
Control Solution %: 0.100%
Solution Control Lot: 08G056
Model No.: CU-34
Serial No.: DDWH S3-0286
Expires: 07/02/2010
Bottle No.: 0371

Coordinator

Last Name: WEYMAN

First Name: HAROLD

MI: -


Signature: *Harold Weyman* #6089

Badge No.: 6289

Date: 09/24/2009

*Black Key Temperature Probe Serial.....# DDWAP2-001 N.W.O.

*Digital NIST Temperature Measuring System Serial.....# 80614940 N.W.O.

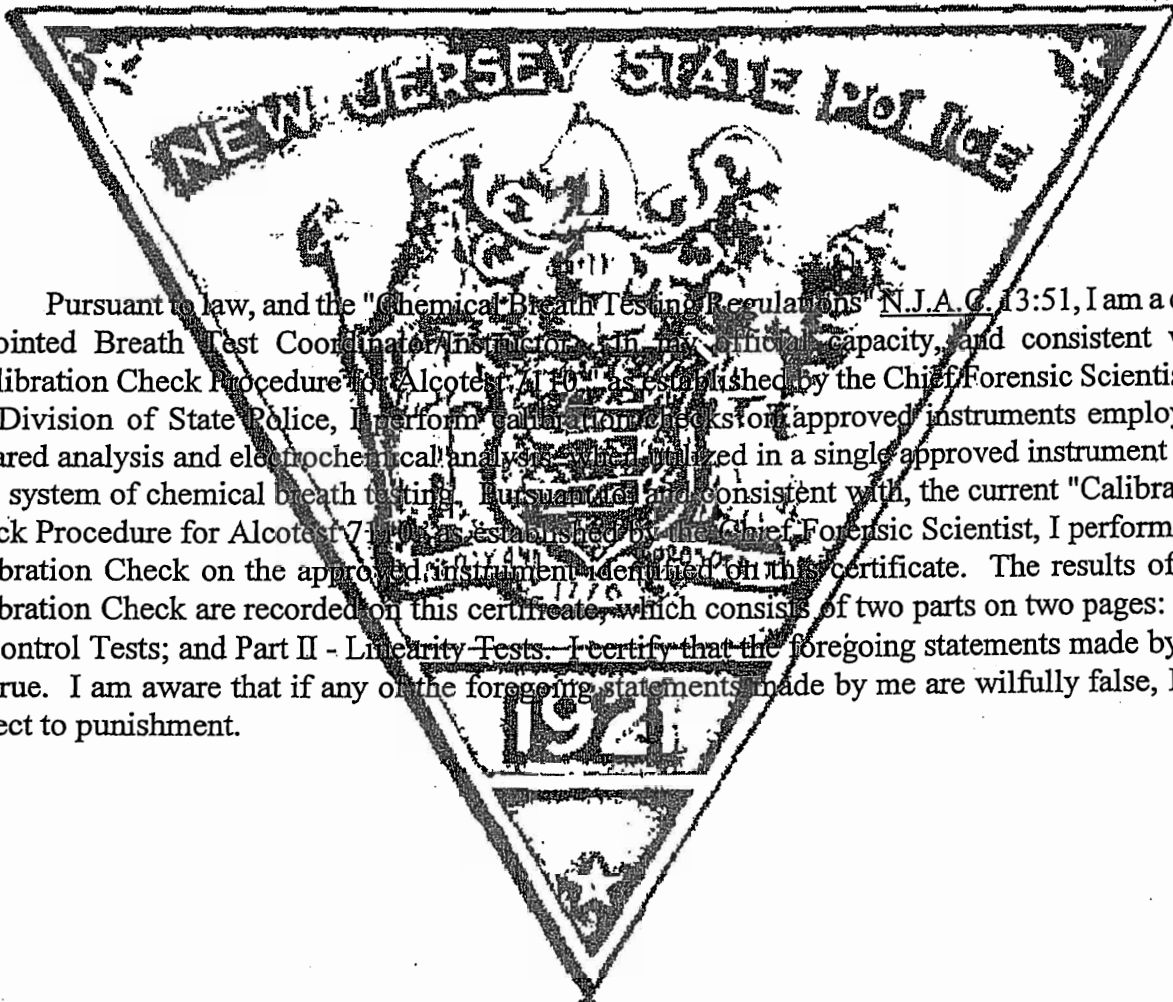

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor, in my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to and consistent with, the current "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part I - Control Tests

Equipment Alcotest 7110 MKIII-C Serial No.: ARWA-0186
Location: FRANKLIN TOWNSHIP P.D.
Calibration File No.: 00888 Calib. Date: 09/24/2009 Calib. No.: 00010
Certification File No.: 00889 Cert. Date: 09/24/2009 Cert. No.: 00007
Linearity File No.: 00816 Lin. Date: 04/08/2009 Lin. No.: 00006
Solution File No.: 00880 Soln. Date: 09/04/2009 Soln. No.: 00083
Sequential File No.: 00889 File Date: 09/24/2009

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDWH S3-0286
Control Solution %: 0.100% Expires: 07/02/2010
Solution Control Lot: 08G056 Bottle No.: 0371

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	14:35D		
Control 1 EC	0.099%	14:36D	33.9°C	*** TEST PASSED ***
Control 1 IR	0.099%	14:36D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:36D		
Control 2 EC	0.099%	14:37D	33.9°C	*** TEST PASSED ***
Control 2 IR	0.099%	14:37D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:37D		
Control 3 EC	0.099%	14:38D	33.9°C	*** TEST PASSED ***
Control 3 IR	0.099%	14:38D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:39D		

All tests within acceptable tolerance.

Coordinator


Last Name: WEYMAN

First Name: HAROLD


MI: -

Badge No.: 6289

Date: 09/24/2009

Signature: 

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to and consistent with, the current "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

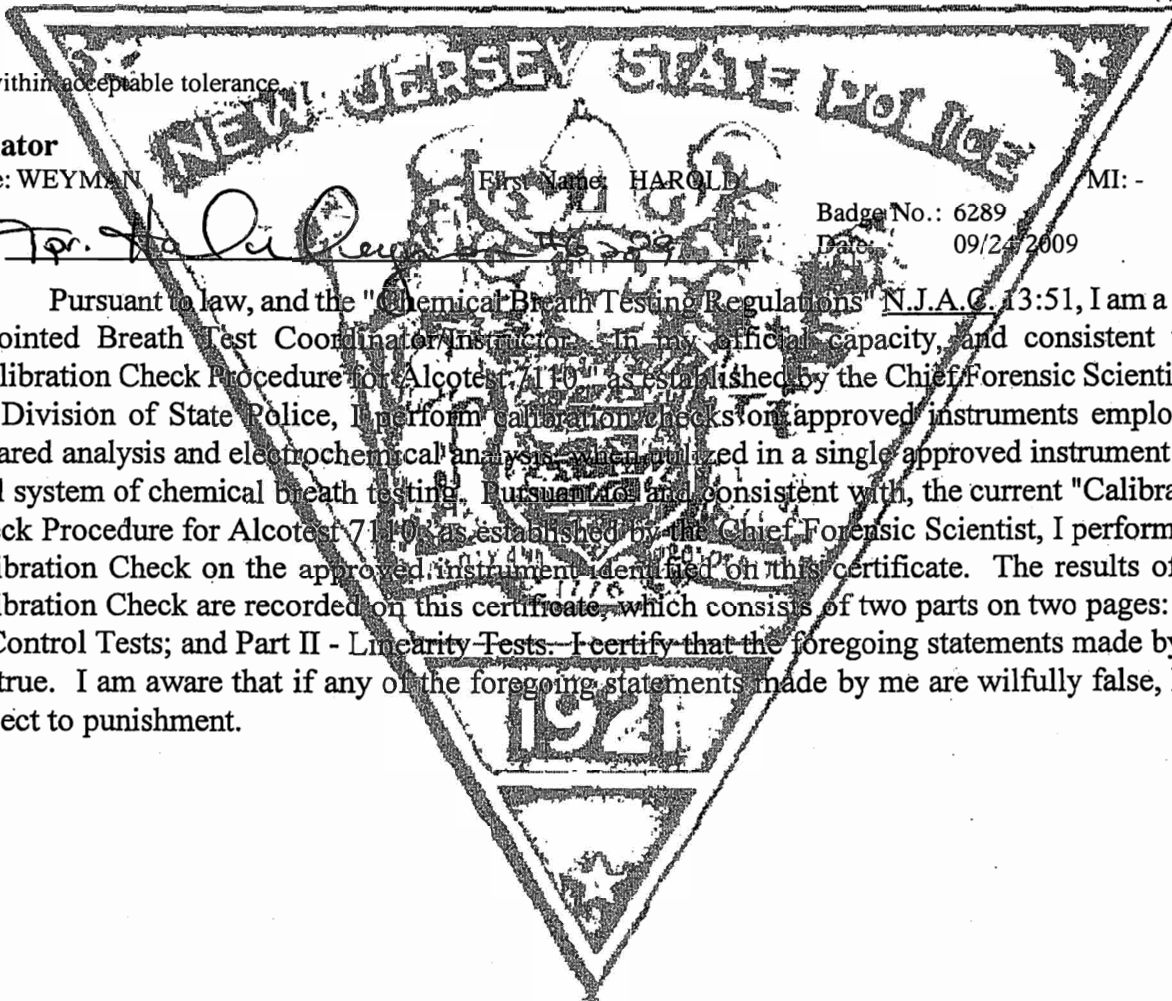

Alcotest 7110 Calibration Certificate

Part II - Linearity Tests

Equipment	Alcotest 7110 MKIII-C	Serial No.:	ARWA-0186
Location:	FRANKLIN TOWNSHIP P.D.	Calib. No.:	00010
Calibration File No.:	00888	Calib. Date:	09/24/2009
Certification File No.:	00889	Cert. Date:	09/24/2009
Linearity File No.:	00890	Lin. Date:	09/24/2009
Solution File No.:	00880	Soln. Date:	09/04/2009
Sequential File No.:	00890	File Date:	09/24/2009
Calibrating Unit:	WET	Model No.:	CU-34
Control Solution %:	0.040%	Serial No.:	DDMK S3-0003
Solution Control Lot:	08F054	Expires:	06/26/2010
		Bottle No.:	1131
Calibrating Unit:	WET	Model No.:	CU-34
Control Solution %:	0.080%	Serial No.:	DDRK S3-0005
Solution Control Lot:	08F055	Expires:	06/28/2010
		Bottle No.:	1151
Calibrating Unit:	WET	Model No.:	CU-34
Control Solution %:	0.160%	Serial No.:	DDRF S3-0009
Solution Control Lot:	08G057	Expires:	07/07/2010
		Bottle No.:	0503

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	14:55D		
Control 1 EC	0.040%	14:55D	33.9°C	*** TEST PASSED ***
Control 1 IR	0.040%	14:55D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:57D		
Control 2 EC	0.040%	14:57D	33.9°C	*** TEST PASSED ***
Control 2 IR	0.041%	14:57D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:59D		
Control 3 EC	0.080%	14:59D	33.9°C	*** TEST PASSED ***
Control 3 IR	0.079%	14:59D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	15:01D		
Control 4 EC	0.080%	15:01D	33.9°C	*** TEST PASSED ***
Control 4 IR	0.077%	15:01D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	15:03D		
Control 5 EC	0.158%	15:03D	33.9°C	*** TEST PASSED ***
Control 5 IR	0.158%	15:03D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	15:05D		
Control 6 EC	0.158%	15:05D	33.9°C	*** TEST PASSED ***
Control 6 IR	0.158%	15:05D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	15:07D		

All tests within acceptable tolerance.


Coordinator

Last Name: WEYMAN

First Name: HAROLD

MI: -

Signature: _____

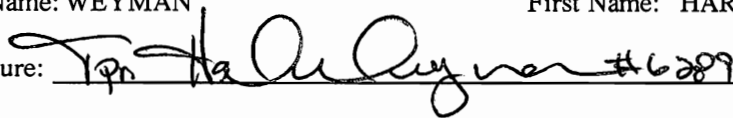

Badge No.: 6289

Date: 09/24/2009

DEPARTMENT OF
Law and Public Safety
 This is to certify that

Harold Weyman
 New Jersey State Police

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL TESTS AND ANALYSES PURSUANT TO CHAPTER 142 OF THE LAWS OF 1966 IN THE OPERATION OF THE A METHOD TO DETERMINE INTOXICATION. **ALCO TEST 7110 MKIII-C**
 GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY, THE 30th DAY OF MAY

TWO THOUSAND AND EIGHT

[Signature]
 SUPERINTENDENT
 NEW JERSEY STATE POLICE

[Signature]
 ATTORNEY GENERAL
 STATE OF NEW JERSEY

ORIGINAL COURSE DATES

	DATE	Refresher Course PLACE	INSTRUCTOR
1.	_____	_____	_____
2.	_____	_____	_____
3.	_____	_____	_____
4.	_____	_____	_____
5.	_____	_____	_____
6.	_____	_____	_____
7.	_____	_____	_____
8.	_____	_____	_____
9.	_____	_____	_____

DEPARTMENT OF
Law and Public Safety
 This is to certify that

Harold Weyman
 New Jersey State Police

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMISE BREATH ANALYSES PURSUANT TO CHAPTER 142 OF
 THE LAWS OF 1966 IN THE OPERATION OF THE Breath Test Coordinator/Instructor
 A METHOD TO DETERMINE INTOXICATION.
 GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY, this 6th DAY OF November




TWO THOUSAND AND Eight

[Signature]
 SUPERINTENDENT
 NEW JERSEY STATE POLICE

[Signature]
 ATTORNEY GENERAL
 STATE OF NEW JERSEY

ORIGINAL COURSE DATES

	DATE	Refresher Course PLACE	INSTRUCTOR
1.			
2.			
3.			
4.			
5.			
6.			
7.			
8.			
9.			

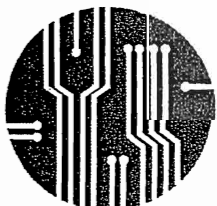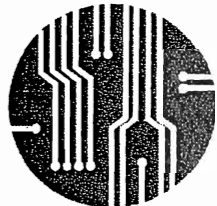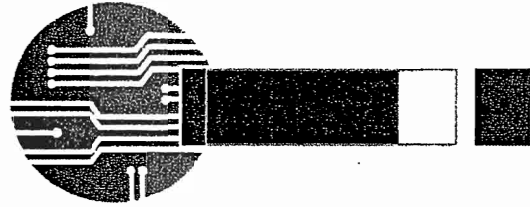

CERTIFICATE

This is to certify that


Harold Weyman
Detective, #6289

has successfully completed the two day Draeger Safety Diagnostics, Inc. Alcohol Coordinator Training Course on the New Jersey specific Alcotest® 7110 MKIII-C and is hereby certified as a qualified

**Operator Trainer and
Maintenance Technician**

Completion of this course qualifies this individual to train and certify Operators in the proper use and operation as well as perform Preventive Maintenance on the New Jersey specific Alcotest® 7110 MKIII-C.

Date: September 18, 2008



Instructor: Hansueli Ryser

Dräger



ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST). The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification. For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe
DDWAP2-001

Certification date:
02/03/2009

Next Certification due:
02/03/2010

Probe Value
101

Draeger Safety Diagnostics, Inc.
Technical Service Department





JON S. CORZINE
Governor

State of New Jersey
OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON NJ 08628-0068
(609) 882-2000

ANNE MILGRAM
Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.040 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.045 to 0.051 grams per 100 milliliters of solution.

MANUFACTURER: Drager Safety, Inc.

ANALYSIS DATE: 07/16/2008

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 08F054

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have an ethyl alcohol concentration range of 0.0487 to 0.0493 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is June 26, 2010.

As Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ajit R. Tungare
Chief Forensic Scientist
Division of State Police

Sworn to and subscribed before me this 19th day of August, 2008.

Notary

JOHN R. LEAVER
NOTARY PUBLIC STATE OF NEW JERSEY
MY COMMISSION EXPIRES 12/14/2012



New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





JON S. CORZINE
Governor

State of New Jersey
OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON NJ 08628-0068
(609) 882-2000

ANNE MILGRAM
Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.080 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.094 to 0.099 grams per 100 milliliters of solution.

MANUFACTURER: Drager Safety, Inc.

ANALYSIS DATE: 07/25/2008

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 08F055

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have an ethyl alcohol concentration range of 0.0977 to 0.0984 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is June 28, 2010.

As Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ajit R. Tungare
Chief Forensic Scientist
Division of State Police

Sworn to and subscribed before me this 11th day of August, 2008.

Notary

JOHN R. LEAVER
NOTARY PUBLIC STATE OF NEW JERSEY
MY COMMISSION EXPIRES 12/14/2012





JON S. CORZINE
Governor

State of New Jersey
OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON NJ 08628-0068
(609) 882-2000

ANNE MILGRAM
Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.117 to 0.125 grams per 100 milliliters of solution.

MANUFACTURER: Drager Safety, Inc. **ANALYSIS DATE:** 07/24/2008

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 08G056

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have an ethyl alcohol concentration range of 0.1227 to 0.1236 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is July 2, 2010.

As Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ajit R. Tungare
Chief Forensic Scientist
Division of State Police

Sworn to and subscribed before me this 13th day of August, 2008.

Notary

Linda L. DeSantis
My Commission
Expires Aug. 17, 2009





JON S. CORZINE
Governor

State of New Jersey
OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON NJ 08628-0068
(609) 882-2000

ANNE MILGRAM
Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.160 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.188 to 0.199 grams per 100 milliliters of solution.

MANUFACTURER: Drager Safety, Inc. ANALYSIS DATE: 07/28/2008

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 08G057

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have an ethyl alcohol concentration range of 0.1956 to 0.1959 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is July 7, 2010.

As Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ajit R. Tungare
Chief Forensic Scientist
Division of State Police

Sworn to and subscribed before me this 19th day of August, 2008.

Notary
JOHN R. LEAVER
NOTARY PUBLIC STATE OF NEW JERSEY
MY COMMISSION EXPIRES 12/14/2012





Dräger safety

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

Model: ALCOTEST® CU34

Model: MARK IIA

Other: _____

Serial Number:

JDMKS3-0003

Certification Date

Technician

Re-Certification Due Date

02-03-09

JR

02-03-10



Draegersafety

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

Model: ALCOTEST® CU34

Model: MARK IIA

Other: _____

Serial Number:

DDRK 53-0005

Certification Date

02-03-09

Technician

[Signature]

Re-Certification Due Date

02-03-10



Drägersafety

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

Model: ALCOTEST® CU34

Model: MARK IIA

Other: _____

Serial Number:

DDRF53-0009

Certification Date

02-03-09

Technician

[Signature]

Re-Certification Due Date

02-03-10

Calibrating Unit New Standard Solution Report

Equipment	Alcotest 7110 MKIII-C	Serial No.:	ARWA-0186
Location:	FRANKLIN TOWNSHIP P.D.		
Calibration File No.:	00888	Calib. Date:	09/24/2009
Certification File No.:	00889	Cert. Date:	09/24/2009
Linearity File No.:	00890	Lin. Date:	09/24/2009
Solution File No.:	00891	Soln. Date:	09/24/2009
Sequential File No.:	00891	File Date:	09/24/2009
Calibrating Unit:	WET	Model No.:	CU-34
Control Solution %:	0.100%	Serial No.:	DDWH S3-0286
Solution Control Lot:	09A062	Expires:	01/15/2011
		Bottle No.:	0530

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	16:15D		
Control 1 EC	0.101%	16:16D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.100%	16:16D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	16:16D		
Control 2 EC	0.100%	16:17D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.099%	16:17D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	16:17D		
Control 3 EC	0.100%	16:18D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.100%	16:18D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	16:19D		

All tests within acceptable tolerance.

On this date, I installed the above indicated "NEW SOLUTION" in accordance with Alcotest 7110 operator training and procedures established by the (NJSP) Chief Forensic Scientist.

Temperature Probe Serial Number: DDWAPZ-018 H.W.


Changed By:

Last Name: WEYMAN

First Name: HAROLD

MI: -

Signature:

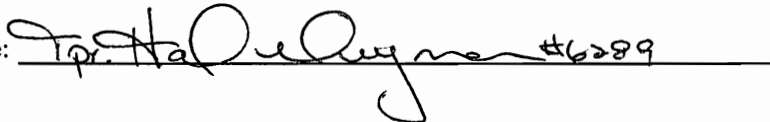

Badge No.: 6289

Date: 09/24/2009



State of New Jersey
 OFFICE OF THE ATTORNEY GENERAL
 DEPARTMENT OF LAW AND PUBLIC SAFETY
 DIVISION OF STATE POLICE
 POST OFFICE Box 7068
 WEST TRENTON NJ 08628-0068
 (609) 882-2000

JON S. CORZINE
 Governor

ANNE MILGRAM
 Attorney General

COLONEL JOSEPH R. FUENTES
 Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.117 to 0.125 grams per 100 milliliters of solution.

MANUFACTURER: Drager Safety, Inc. ANALYSIS DATE: 2/11/2009

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 09A062

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have an ethyl alcohol concentration range of 0.1195 to 0.1197 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is January 15, 2011.

As Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ajit R. Tungare
 Ajit R. Tungare
 Chief Forensic Scientist
 Division of State Police

Sworn to and subscribed before me this 30th day of February, 2009.

Linda L. DeSantis

Linda L. DeSantis
 My Commission
 Expires Aug. 17, 2009



New Jersey Is An Equal Opportunity Employer
 Printed on Recycled Paper and Recyclable

