

ALCOTEST CHECKLIST

Municipality: LONGPORT Alcotest Ser. #: ARXA-0067
County: ATLANTIC Date of Calibration: 05-16-2012

- 1. **Certificate of Accuracy Alcotest 7110 MKIII-C** from Draeger Safety for instrument used in the A.I.R.
- 2. **Certificate of Accuracy CU34 Unit** on Alcotest Instrument used.
Ser. #: DDXC S3-0135
- 3. **Certificate of Accuracy Alcotest 7110 Temperature Probe** from Draeger Safety for instrument in A.I.R. or equivalent.
Ser. #: DDWA P2-199
- 4. **Digital Temperature Measuring System Report of Calibration.**
Ser. #: 122172174
- 5.
 - A. Alcotest 7110 Calibration Record
 - B. Alcotest 7110 Calibration Certificate **Part I - Control Tests.**
 - C. Alcotest 7110 Calibration Certificate **Part II - Linearity Tests.**
 - D. **Alcotest Card** of operator/coordinator who performed tests.
 - E. **Certificate of Accuracy Alcotest 7110 Temperature Probe** from Draeger Safety used in the Calibration Tests ["Black Key" probe of Breath Test Coordinator].
Ser. #: DDWA P2-016
- 6. **Certificates of Analysis** for each **Simulator Solution** used in Calibration/Linearity Tests:

<input checked="" type="checkbox"/> A.	0.04% Solution.	<u>11</u>	<u>F</u>	<u>090</u>
<input checked="" type="checkbox"/> B.	0.08% Solution.	<u>11</u>	<u>F</u>	<u>091</u>
<input checked="" type="checkbox"/> C.	0.10% Solution.	<u>10</u>	<u>I</u>	<u>082</u>
<input checked="" type="checkbox"/> D.	0.16% Solution.	<u>11</u>	<u>G</u>	<u>092</u>
- 7. Certificate of Accuracy Alcotest CU34 Simulators from Draeger Safety (when conducting the Calibration/Linearity Tests) for:
 - A. 0.04% used in Calibration/Linearity Testing. DDWE S3-0196
 - B. 0.08% used in Calibration/Linearity Testing. DDWE S3-0203
 - C. 0.10% used in Calibration/Linearity Testing. DDXC S3-0135
[Same as instrument's CU34 unit].
 - D. 0.16% used in Calibration/Linearity Testing. DDWE S3 0205
- 8.
 - A. New Standard Solution Report following Calibration.
 - B. Calibrating CU34 Unit for same [same as CU34 unit on instrument].
 - C. Certificate of Analysis 0.10% solution for same.
Lot #: 10 H 081
 - D. Alcotest card of operator/coordinator who completed change.

05-17-2012

Drägersafety

Alcotest[®] 7110 MKIII-C

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest 7110 MKIII-C has been tested for accuracy and found to be in compliance with the National Highway Traffic Safety Administration Standard for evidential breath testing devices. The Alcotest MKIII-C is compliant as a "mobile" and "nonmobile" EBT with 49 FR 48854, 49 FR 48864 and 58 FR 48705. The manufacturer recommends accuracy verification of this instrument within 12 months of the calibration date below, or sooner, according to your State Specifications.

Certification Date:


SERIAL NUMBER:

8-10-2010

ARXA-0067

Draeger Safety Diagnostics, Inc.

pk

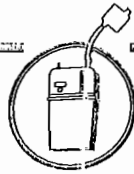

Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249 12/19/94 Notices)

Dräger Safety Diagnostics, Inc.

Model: ALCOTEST® CU34

Model: MARK IIA

Other: _____

Serial Number:

DDXC53-0135

Certification Date

Technician

Re-Certification Due Date

10-27-11

AS

10-27-12

Dräger

ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST).

The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification.

For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

Certification date:

Next Certification due:

DDWAP2-199

10-27-11

10-27-12

Probe Value

103

Dräger Safety Diagnostics, Inc.
Technical Service Department

AS



Calibration
Certificate No. 1750.01

**Calibration complies with ISO/IEC
17025, ANSI/NCSL Z540-1, and 9001**



Cert. No.: 4000-4269983

Traceable® Certificate of Calibration for Digital Thermometer

Manufactured for and distributed by: VWR International, LLC, Radnor Corporate Center, Bldg 1, Ste 200, 100 Matsonford Road, Radnor, PA 19087

Instrument Identification:

Model: 61220-601 S/N: 122172174 Manufacturer: Control Company

Standards/Equipment:

Description	Serial Number	Due Date	NIST Traceable Reference
Temperature Calibration Bath TC-275	A9A237		
Digital Thermometer	B16815	6/06/12	B1606038
PRT Temperature Probe	01641	5/28/12	B1526085
Temperature Calibration Bath TC-256	B01375		
Thermistor Module	A27129	10/31/12	1000306945
Temperature Probe	157	11/13/12	6-BL72N-1-1
Temperature Calibration Bath TC-179	A45240		
Thermistor Module	A17118	2/01/13	1000311439
Temperature Probe	128	2/14/13	6-BN9WZ-27-1

Certificate Information:

Technician: 68 Procedure: CAL-06 Cal Date: 3/30/12 Cal Due: 3/30/14
Test Conditions: 23.0°C 44.0 %RH 1012 mBar

Calibration Data: (New Instrument)

Unit(s)	Nominal	As Found	In Tol	Nominal	As Left	In Tol	Min	Max	±U	TUR
°C		N.A.		-0.000	0.002	Y	-0.050	0.050	0.013	3.8:1
°C		N.A.		25.001	25.000	Y	24.951	25.051	0.014	3.6:1
°C		N.A.		60.000	60.003	Y	59.950	60.050	0.018	2.8:1
°C		N.A.		100.001	100.003	Y	99.951	100.051	0.018	2.8:1

This Instrument was calibrated using Instruments Traceable to National Institute of Standards and Technology.

A Test Uncertainty Ratio of at least 4:1 is maintained unless otherwise stated and is calculated using the expanded measurement uncertainty. Uncertainty evaluation includes the instrument under test and is calculated in accordance with the ISO "Guide to the Expression of Uncertainty in Measurement" (GUM). The uncertainty represents an expanded uncertainty using a coverage factor k=2 to approximate a 95% confidence level. In tolerance conditions are based on test results falling within specified limits with no reduction by the uncertainty of the measurement. The results contained herein relate only to the item calibrated. This certificate shall not be reproduced except in full, without written approval of Control Company.

Nominal=Standard's Reading; As Left=Instrument's Reading; In Tol=In Tolerance; Min/Max=Acceptance Range; ±U=Expanded Measurement Uncertainty; TUR=Test Uncertainty Ratio; Accuracy=±(Max-Min)/2; Min = As Left Nominal(Rounded) - Tolerance; Max = As Left Nominal(Rounded) + Tolerance; Date=MM/DD/YY

Nicol Rodriguez
Nicol Rodriguez, Quality Manager

Wallace Berry
Wallace Berry, Technical Manager

Maintaining Accuracy:

In our opinion once calibrated your Digital Thermometer should maintain its accuracy. There is no exact way to determine how long calibration will be maintained. Digital Thermometers change little, if any at all, but can be affected by aging, temperature, shock, and contamination.

Recalibration:

For factory calibration and re-certification traceable to National Institute of Standards and Technology contact Control Company.

CONTROL COMPANY 4455 Rex Road Friendswood, TX 77546 USA
Phone 281 482-1714 Fax 281 482-9448 service@control3.com www.control3.com

Control Company is an ISO 17025:2005 Calibration Laboratory Accredited by (A2LA) American Association for Laboratory Accreditation, Certificate No. 1750.01.
Control Company is ISO 9001:2008 Quality Certified by (DNV) Det Norske Veritas, Certificate No. CERT-01805-2006-AQ-HOU-ANAB.
International Laboratory Accreditation Cooperation (ILAC) - Multilateral Recognition Arrangement (MRA).

Alcotest 7110 Calibration Record

Equipment Alcotest 7110 MKIII-C Serial No.: ARXA-0067
Location: LONGPORT POLICE
Calibration File No.: 00554 Calib. Date: 05/16/2012 Calib. No.: 00017
Certification File No.: 00535 Cert. Date: 12/01/2011 Cert. No.: 00011
Linearity File No.: 00536 Lin. Date: 12/01/2011 Lin. No.: 00011
Solution File No.: 00552 Soln. Date: 04/19/2012 Soln. No.: 00124
Sequential File No.: 00554 File Date: 05/16/2012


Calibrating Unit: WET Model No.: CU-34 Serial No.: DDXC S3-0135
Control Solution %: 0.100% Expires: 09/09/2012
Solution Control Lot: 10I082 Bottle No.: 0958

Coordinator

Last Name: DELLANOCE First Name: JOSEPH MI: S
Signature: Joe I. Dellanoce # 6027 Badge No.: 6027
Date: 05/16/2012

*Black Key Temperature Probe Serial.....# DDWAP2-016

*Digital NIST Temperature Measuring System Serial.....# 122172174

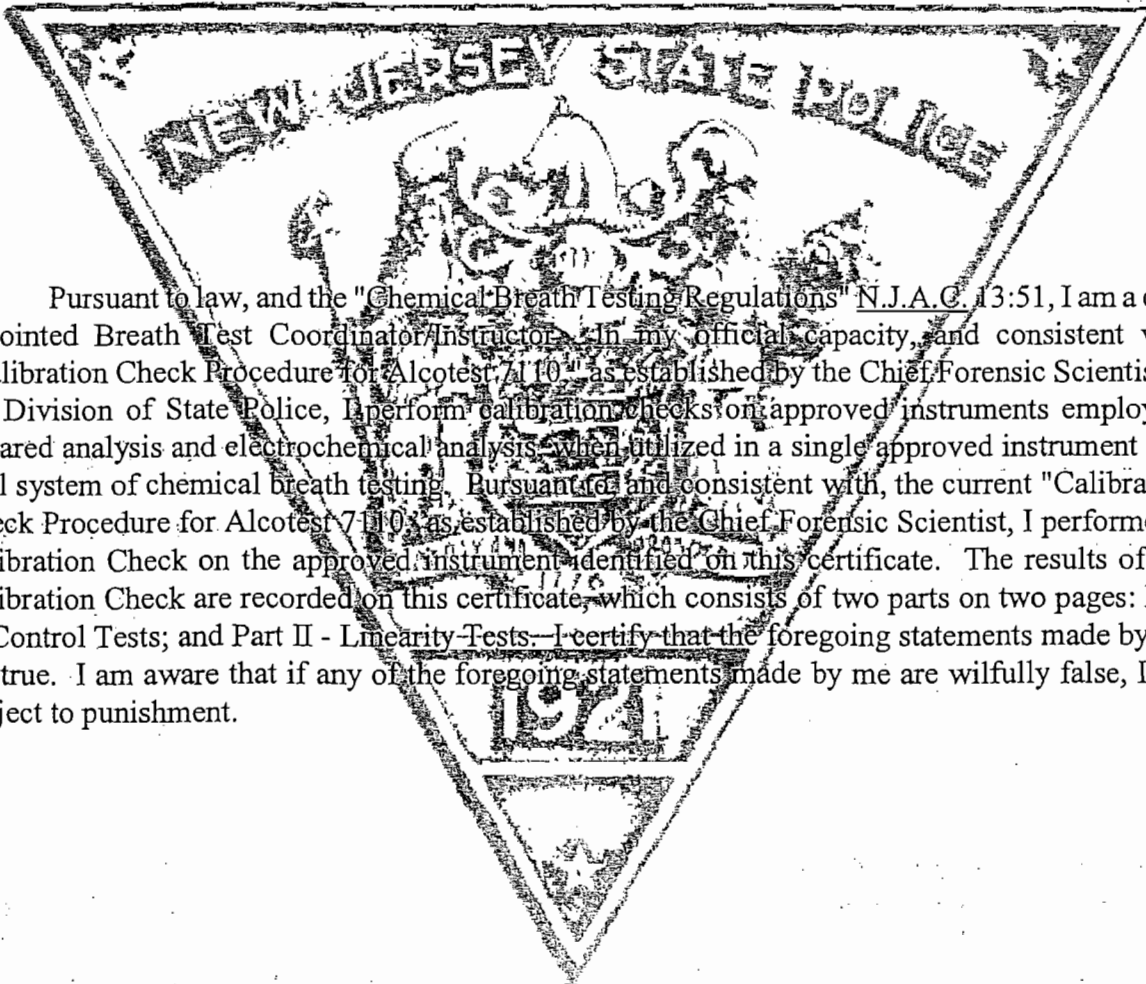

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to and consistent with the current "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part I - Control Tests

Equipment Alcotest 7110 MKIII-C Serial No.: ARXA-0067
Location: LONGPORT POLICE
Calibration File No.: 00554 Calib. Date: 05/16/2012 Calib. No.: 00017
Certification File No.: 00555 Cert. Date: 05/16/2012 Cert. No.: 00012
Linearity File No.: 00536 Lin. Date: 12/01/2011 Lin. No.: 00011
Solution File No.: 00552 Soln. Date: 04/19/2012 Soln. No.: 00124
Sequential File No.: 00555 File Date: 05/16/2012

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDXC S3-0135
Control Solution %: 0.100% Expires: 09/09/2012
Solution Control Lot: 10I082 Bottle No.: 0958

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	10:50D		
Control 1 EC	0.100%	10:51D	33.9°C	*** TEST PASSED ***
Control 1 IR	0.100%	10:51D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:52D		
Control 2 EC	0.099%	10:52D	33.9°C	*** TEST PASSED ***
Control 2 IR	0.100%	10:52D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:53D		
Control 3 EC	0.100%	10:53D	33.9°C	*** TEST PASSED ***
Control 3 IR	0.099%	10:53D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:54D		

All tests within acceptable tolerance.

Coordinator

Last Name: DELLANOCE

First Name: JOSEPH

MI: S

Signature: 

Badge No.: 6027

Date: 05/16/2012

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to and consistent with, the current "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part II - Linearity Tests

Equipment Alcotest 7110 MKIII-C Serial No.: ARXA-0067
Location: LONGPORT POLICE
Calibration File No.: 00554 Calib. Date: 05/16/2012 Calib. No.: 00017
Certification File No.: 00555 Cert. Date: 05/16/2012 Cert. No.: 00012
Linearity File No.: 00556 Lin. Date: 05/16/2012 Lin. No.: 00012
Solution File No.: 00552 Soln. Date: 04/19/2012 Soln. No.: 00124
Sequential File No.: 00556 File Date: 05/16/2012

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDWE S3-0196
Control Solution %: 0.040% Expires: 06/27/2013
Solution Control Lot: 11F090 Bottle No.: 0258

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDWE S3-0203
Control Solution %: 0.080% Expires: 06/30/2013
Solution Control Lot: 11F091 Bottle No.: 0316

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDWE S3-0205
Control Solution %: 0.160% Expires: 07/03/2013
Solution Control Lot: 11G092 Bottle No.: 0717

Function	Result %BAC	Time HH:MM	Temperature Simulator (°C)	Comment(s) or Error(s)
Ambient Air Blank	0.000%	11:09D		
Control 1 EC	0.041%	11:10D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.040%	11:10D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:11D		
Control 2 EC	0.041%	11:12D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.040%	11:12D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:13D		
Control 3 EC	0.081%	11:14D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.080%	11:14D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:15D		
Control 4 EC	0.081%	11:16D	34.0°C	*** TEST PASSED ***
Control 4 IR	0.079%	11:16D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:17D		
Control 5 EC	0.160%	11:18D	33.9°C	*** TEST PASSED ***
Control 5 IR	0.159%	11:18D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:20D		
Control 6 EC	0.160%	11:20D	34.0°C	*** TEST PASSED ***
Control 6 IR	0.158%	11:20D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:22D		

All tests within acceptable tolerance.

Coordinator

Last Name: DELLANOCE

First Name: JOSEPH

MI: S

Signature: _____

Per I J. Dellanoce # 6027

Badge No.: 6027

Date: 05/16/2012

DEPARTMENT OF
Traffic and Public Safety
This is to certify that
Joseph S. Dellanoco
New Jersey State Police

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL BREATH ANALYSES PURSUANT TO CHAPTER 142 OF THE LAWS OF 1966 IN THE OPERATION OF THE Breathalyzer
A METHOD TO DETERMINE INTOXICATION

GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY THIS 13th DAY OF Dec.
TWO THOUSAND AND 01

[Signature]
SUPERINTENDENT
NEW JERSEY STATE POLICE

[Signature]
ATTORNEY GENERAL
STATE OF NEW JERSEY

ORIGINAL COURSE DATES 8/30 - 9/3/99

Refresher Course

DATE	PLACE	INSTRUCTOR
1. <u>12/12/01</u>	<u>A.C.T.C.</u>	<u>Potter</u>
2. <u>2-2-03</u>	<u>SCPA</u>	<u>C Potter</u>
3. <u>10-3-05</u>	<u>ACTC</u>	<u>On Stambor</u>
4. _____	_____	_____
5. _____	_____	_____
6. _____	_____	_____
7. _____	_____	_____
8. _____	_____	_____
9. _____	_____	_____

S.P. 293B (Rev. 4/00)

DEPARTMENT OF
Traffic and Public Safety
This is to certify that
Joseph S. Dellanoco
New Jersey State Police

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL BREATH ANALYSES PURSUANT TO CHAPTER 142 OF THE LAWS OF 1966 IN THE OPERATION OF THE Alcotest 7110 MKIII-C
A METHOD TO DETERMINE INTOXICATION

GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY THIS 29th DAY OF March
TWO THOUSAND AND Five

[Signature]
SUPERINTENDENT
NEW JERSEY STATE POLICE

[Signature]
ATTORNEY GENERAL
STATE OF NEW JERSEY

ORIGINAL COURSE DATES _____

Refresher Course

DATE	PLACE	INSTRUCTOR
1. <u>2-15-07</u>	<u>SCPA</u>	<u>C Potter</u>
2. <u>12/7/09</u>	<u>OLPA</u>	<u>Adam Stambor</u>
3. <u>7/20/11</u>	<u>STOCKTON</u>	<u>Adam Stambor</u>
4. _____	_____	_____
5. _____	_____	_____
6. _____	_____	_____
7. _____	_____	_____
8. _____	_____	_____
9. _____	_____	_____

S.P. 293B (Rev. 12/04)

DEPARTMENT OF
Traffic and Public Safety
This is to certify that
Joseph S. Dellanoco
New Jersey State Police

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL BREATH ANALYSES PURSUANT TO CHAPTER 142 OF THE LAWS OF 1966 IN THE OPERATION OF THE Breath Test Coordinator/Instructor
A METHOD TO DETERMINE INTOXICATION

GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY THIS 14th DAY OF January
TWO THOUSAND AND EIGHT

[Signature]
SUPERINTENDENT
NEW JERSEY STATE POLICE

[Signature]
ATTORNEY GENERAL
STATE OF NEW JERSEY

ORIGINAL COURSE DATES _____

Refresher Course

DATE	PLACE	INSTRUCTOR
1. <u>12/7/09</u>	<u>OLPA</u>	<u>Adam Stambor</u>
2. <u>7/20/11</u>	<u>STOCKTON</u>	<u>Adam Stambor</u>
3. _____	_____	_____
4. _____	_____	_____
5. _____	_____	_____
6. _____	_____	_____
7. _____	_____	_____
8. _____	_____	_____
9. _____	_____	_____

S.P. 293B (Rev. 03/10)



State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
PO Box 080
TRENTON, NJ 08625-0080

JON S. CORZINE
Governor

ANNE MILGRAM
Attorney General

January 14, 2008

Col. Joseph R. Fuentes, Superintendent
Division of State Police
Division Headquarters
P.O. Box 7068
West Trenton, New Jersey 08628

**Re: Breath Test Coordinator/Instructor, Certification -
Trooper Joseph S. Dellanoce #6027**

Dear Colonel Fuentes:

Pursuant to the provisions of *N.J.A.C.* 13:51-2.1 (b) and (c), as adopted and promulgated under the provisions of *N.J.S.A.* 39:4-50.3, 39:3-10.25 and 12:7-56, I hereby approve Trooper Joseph S. Dellanoce #6027, as a duly certified Breath Test Coordinator/Instructor. This approval is effective immediately.

Very truly yours,


Anne Milgram
Attorney General

jk

- c. Trooper Joseph S. Dellanoce #6027, Alcohol/Drug Test Unit, Division of State Police
- Lt. Mark Kolodzieski, Unit Head, Alcohol/Drug Test Unit, Division of State Police



330474



CERTIFICATE

This is to certify that


Joseph S. Dellanoce #6027

has successfully completed the two day Draeger Safety Diagnostics, Inc. Operator Training and Preventive Maintenance Course on the New Jersey specific Alcotest® 7110 MKIII-C and is hereby certified as a qualified

**Operator Trainer and
Maintenance Technician**

Completion of this course qualifies this individual to train and certify Operators in the proper use and operation as well as perform Preventive Maintenance on the New Jersey specific Alcotest® 7110 MKIII-C.

Date: 4/12/2007

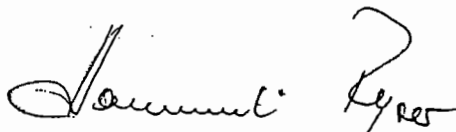

Instructor: Hansueli Ryser

Dräger



ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST). The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification. For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

Certification date:

Next Certification due:

DDWAP2-016

2/3/12

2/3/13

Probe Value

106

Draeger Safety Diagnostics, Inc.
Technical Service Department

DM



State of New Jersey
 OFFICE OF THE ATTORNEY GENERAL
 DEPARTMENT OF LAW AND PUBLIC SAFETY
 DIVISION OF STATE POLICE
 POST OFFICE BOX 7068
 WEST TRENTON NJ 08628-0068
 (609) 882-2000

CHRIS CHRISTIE
 Governor

PAULA T. DOW
 Attorney General

KIM GUADAGNO
 Lt. Governor

COLONEL JOSEPH R. FUENTES
 Superintendent

CERTIFICATION OF ANALYSIS
0.04 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.045 to 0.051 grams per 100 milliliters of solution.

MANUFACTURER: Drager Safety, Inc.


ANALYSIS DATE: 7/21/2011

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 11F090


Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0478 to 0.0485 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is June 27, 2013.

As Assistant Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

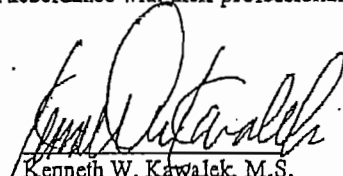
 Kenneth W. Kawalek, M.S.
 Assistant Chief Forensic Scientist
 Division of State Police

Sworn to and subscribed before me this 1st day of August, 2011.

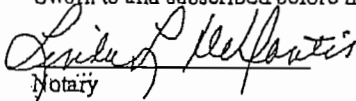
 Notary

Linda L. Desantis
 Notary Public, New Jersey
 My Commission Expires 8-17-14



New Jersey Is An Equal Opportunity Employer
 Printed on Recycled Paper and Recyclable





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON NJ 08628-0068
(609) 882-2000

CHRIS CHRISTIE
Governor

KIM GUADAGNO
Lt. Governor

PAULA T. DOW
Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.08 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.094 to 0.099 grams per 100 milliliters of solution.

MANUFACTURER: Drager Safety, Inc. ANALYSIS DATE: 7/22/2011

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 11F091

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0968 to 0.0973 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is June 30, 2013.

As Assistant Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Kenneth W. Kawalek, M.S.
Assistant Chief Forensic Scientist
Division of State Police

Sworn to and subscribed before me this 1st day of August, 2011.

Notary

Linda L. Desantis
Notary Public, New Jersey
My Commission Expires 8-17-14





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON NJ 08628-0068
(609) 882-2000

CHRIS CHRISTIE
Governor

KIM GUADAGNO
Lt. Governor

PAULA T. DOW
Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.117 to 0.125 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 9/23/2010

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 10I082

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1190 to 0.1194 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is September 9, 2012.

As Assistant Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Handwritten signature of Kenneth W. Kawalek
Kenneth W. Kawalek, M.S.
Assistant Chief Forensic Scientist
Division of State Police

Sworn to and subscribed before me this 28th day of September, 2010.

Handwritten signature of Linda L. Decantis
Notary

Linda L. Decantis
Notary Public, New Jersey
My Commission Expires 8-17-14





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON NJ 08628-0068
(609) 882-2000

PAULA T. DOW
Attorney General

CHRIS CHRISTIE
Governor

KIM GUADAGNO
Lt. Governor

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.16 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.188 to 0.199 grams per 100 milliliters of solution.

MANUFACTURER: Drager Safety, Inc. ANALYSIS DATE: 7/25/2011

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 11G092

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1917 to 0.1927 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is July 3, 2013.

As Assistant Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

[Signature of Kenneth W. Klawalek]
Kenneth W. Klawalek, M.S.
Assistant Chief Forensic Scientist
Division of State Police

Sworn to and subscribed before me this 1st day of August, 2011.


[Signature of Linda L. Desantis]
Notary

Linda L. Desantis
Notary Public, New Jersey
My Commission Expires 8-17-14



New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable



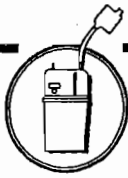

Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDWES3-0196

Certification Date


Technician

Re-Certification Due Date

2/2/12

am

2/2/13

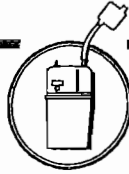

Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

Model: ALCOTEST[®] CU34

Model: MARK IIA

Other: _____

Serial Number:

DDWE53-0203

Certification Date


Technician

Re-Certification Due Date

2/2/12

DM

2/2/13

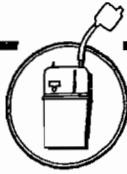

Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249, 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

Model: ALCOTEST® CU34

Model: MARK IIA

Other: _____

Serial Number:

DDWFS3-0205

Certification Date

Technician

Re-Certification Due Date

2/2/12

zm

2/2/13

Calibrating Unit

New Standard Solution Report

Equipment Alcotest 7110 MKIII-C Serial No.: ARXA-0067
Location: LONGPORT POLICE
Calibration File No.: 00554 Calib. Date: 05/16/2012 Calib. No.: 00017
Certification File No.: 00555 Cert. Date: 05/16/2012 Cert. No.: 00012
Linearity File No.: 00556 Lin. Date: 05/16/2012 Lin. No.: 00012
Solution File No.: 00557 Soln. Date: 05/16/2012 Soln. No.: 00125
Sequential File No.: 00557 File Date: 05/16/2012

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDXC S3-0135
Control Solution %: 0.100% Expires: 08/04/2012
Solution Control Lot: 10H081 Bottle No.: 0161

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	12:27D		
Control 1 EC	0.102%	12:28D	33.9°C	*** TEST PASSED ***
Control 1 IR	0.100%	12:28D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:29D		
Control 2 EC	0.101%	12:29D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.101%	12:29D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:30D		
Control 3 EC	0.102%	12:30D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.100%	12:30D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:31D		

All tests within acceptable tolerance.

On this date, I installed the above indicated "NEW SOLUTION" in accordance with Alcotest 7110 operator training and procedures established by the (NJSP) Chief Forensic Scientist.

TEMPERATURE PROBE SERIAL NUMBER: DDWAP2-199₉₀


Changed By:

Last Name: DELLANOCE

First Name: JOSEPH

MI: S

Signature: _____

Tpr J  # 6027

Badge No.: 6027

Date: 05/16/2012



State of New Jersey
 OFFICE OF THE ATTORNEY GENERAL
 DEPARTMENT OF LAW AND PUBLIC SAFETY
 DIVISION OF STATE POLICE
 POST OFFICE BOX 7068
 WEST TRENTON NJ 08628-0068
 (609) 882-2000

CHRIS CHRISTIE
 Governor

KIM GUADAGNO
 Lt. Governor

PAULA T. DOW
 Attorney General

COLONEL JOSEPH R. FUENTES
 Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.117 to 0.125 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.


ANALYSIS DATE: 8/26/2010

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 10H081


Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1185 to 0.1190 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is August 4, 2012.

As Assistant Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

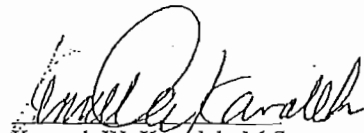
 Kenneth W. Kawalek, M.S.
 Assistant Chief Forensic Scientist
 Division of State Police

Sworn to and subscribed before me this 9 day of September, 2010.

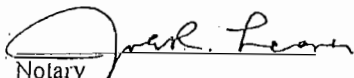
 Notary

JOHN R. LEAVER
 NOTARY PUBLIC STATE OF NEW JERSEY
 MY COMMISSION EXPIRES 12/14/2012



New Jersey Is An Equal Opportunity Employer
 Printed on Recycled Paper and Recyclable

