

ALCOTEST CHECKLIST

Municipality: WILLINGBORO Alcotest Ser.#: ARWC-0060
County: BURLINGTON Date of Calibration: 08-22-2011

- 1. **Certificate of Accuracy Alcotest 7110 MKIII-C** from Draeger Safety for instrument used in the A.I.R.
- 2. **Certificate of Accuracy CU34 Unit** on Alcotest Instrument used.
Ser. #: DDWE S3-0189
- 3. **Certificate of Accuracy Alcotest 7110 Temperature Probe** from Draeger Safety for instrument in A.I.R. or equivalent.
Ser. #: DDUN P2-293
- 4. **Digital Temperature Measuring System Report of Calibration.**
Ser. #: 101 733 534
- 5.
 - A. Alcotest 7110 Calibration Record
 - B. Alcotest 7110 Calibration Certificate **Part I - Control Tests.**
 - C. Alcotest 7110 Calibration Certificate **Part II - Linearity Tests.**
 - D. **Alcotest Card** of operator/coordinator who performed tests.
 - E. **Certificate of Accuracy Alcotest 7110 Temperature Probe** from Draeger Safety used in the Calibration Tests ["Black Key" probe of Breath Test Coordinator].
Ser. #: DDWA P2-016

- 6. **Certificates of Analysis** for each **Simulator Solution** used in Calibration/Linearity Tests:
 - A. 0.04% Solution. 10 A 073
 - B. 0.08% Solution. 10 A 074
 - C. 0.10% Solution. 10 I 082
 - D. 0.16% Solution. 10 A 075

- 7. Certificate of Accuracy Alcotest CU34 Simulators from Draeger Safety (when conducting the Calibration/Linearity Tests) for:
 - A. 0.04% used in Calibration/Linearity Testing. DDWE S3-0196
 - B. 0.08% used in Calibration/Linearity Testing. DDWE S3-0203
 - C. 0.10% used in Calibration/Linearity Testing. DDWE S3-0189
[Same as instrument's CU34 unit].
 - D. 0.16% used in Calibration/Linearity Testing. DDWE S3-0205
- 8.
 - A. New Standard Solution Report following Calibration.
 - B. Calibrating CU34 Unit for same [same as CU34 unit on instrument].
 - C. Certificate of Analysis 0.10% solution for same.
Lot #: 09 L 072
 - D. Alcotest card of operator/coordinator who completed change.

08-24-2011

1175-22-01
AWC
Buckingham

DWME 23-0181

DPM 69-513

101 433 233

DWME 69-016

AWC
69-016
69-016
69-016
69-016

1175-22-01
AWC
69-016

1175-22-01
AWC
69-016

1175-22-01
AWC
69-016

1175-22-01
AWC
69-016

1175-22-01
AWC
69-016

1175-22-01
AWC
69-016

77777

77777

77777

77777

AWC
69-016

Dräger safety

Alcotest[®] 7110 MKIII-C

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest 7110 MKIII-C has been tested for accuracy and found to be in compliance with the National Highway Traffic Safety Administration Standard for evidential breath testing devices. The Alcotest MKIII-C is compliant as a "mobile" and "nonmobile" EBT with 49 FR 48854, 49 FR 48864 and 58 FR 48705. The manufacturer recommends accuracy verification of this instrument within 12 months of the calibration date below, or sooner, according to your State Specifications.


Certification Date:


SERIAL NUMBER:

03/05/2009

AKWC-0060

Draeger Safety Diagnostics, Inc.

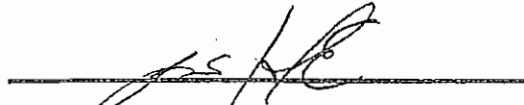

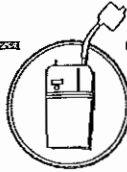

Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDWES3-0189

Certification Date

Technician

Re-Certification Due Date

2-23-11

gmm

2-23-12

Dräger

ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST).

The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification.

For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

Certification date:

Next Certification due:

DDUNP2-293

2-23-11

2-23-12

Probe Value

103

Draeger Safety Diagnostics, Inc.
Technical Service Department

gmm



Calibration
Certificate No. 1750.01

Calibration complies with ISO 9001
ISO/IEC 17025 AND ANSI/NC SL Z540-1



Cert. No.: 4000-2966289

Traceable® Certificate of Calibration for Digital Thermometer

Manufactured for and distributed by: VWR International, P.O. Box 2158, Secaucus, NJ 07094 U.S.A.

Instrument Identification:

Model: 61220-601 S/N: 101733534 Manufacturer: Control Company

Standards/Equipment:

Description	Serial Number	Due Date	NIST Traceable Reference
Temperature Calibration Bath TC-179	A45240		
Thermistor Module	A17118	11/19/10	A9821010
Temperature Probe	128	12/10/10	A9823079
Temperature Calibration Bath TC-231	A79341		
Temperature Probe	3039	12/10/10	A9B23080-1
Temperature Calibration Bath TC-218	A73332		
Thermistor Module	A27129	7/09/10	1000264338
Temperature Probe	5202	3/11/11	B0310050
Temperature Calibration Bath TC-256	B01375		
Temperature Probe	157	7/27/10	A9708011-4

Certificate Information:

Technician: 104 Procedure: CAL-06 Cal Date: 6/08/10 Cal Due: 6/08/12
Test Conditions: 24.0°C 42.0 %RH 1015 mBar

Calibration Data: (New Instrument)

Unit(s)	Nominal	As Found	In Tol	Nominal	As Left	In Tol	Min	Max	±U	TUR
°C		N.A.		0.002	-0.001	Y	-0.048	0.052	0.013	3.8:1
°C		N.A.		24.999	25.000	Y	24.949	25.049	0.013	3.8:1
°C		N.A.		60.001	59.998	Y	59.951	60.051	0.018	2.8:1
°C		N.A.		100.001	100.002	Y	99.951	100.051	0.013	3.8:1

This Instrument was calibrated using Instruments Traceable to National Institute of Standards and Technology.

A Test Uncertainty Ratio of at least 4:1 is maintained unless otherwise stated and is calculated using the expanded measurement uncertainty. Uncertainty evaluation includes the instrument under test and is calculated in accordance with the ISO "Guide to the Expression of Uncertainty in Measurement" (GUM). The uncertainty represents an expanded uncertainty using a coverage factor k=2 to approximate a 95% confidence level. In tolerance conditions are based on test results falling within specified limits with no reduction by the uncertainty of the measurement. The results contained herein relate only to the item calibrated. This certificate shall not be reproduced except in full, without written approval of Control Company.

Nominal=Standard's Reading; As Left=Instrument's Reading; In Tol=In Tolerance; Min/Max=Acceptance Range; ±U=Expanded Measurement Uncertainty; TUR=Test Uncertainty Ratio; Accuracy=(Max-Min)/2; Min=Nominal(Rounded)-Tolerance; Max=Nominal(Rounded)+Tolerance; Date=MM/DD/YY

Nicol Rodriguez
Nicol Rodriguez, Quality Manager

Wallace Berry
Wallace Berry, Technical Manager

Maintaining Accuracy:

In our opinion once calibrated your Digital Thermometer should maintain its accuracy. There is no exact way to determine how long calibration will be maintained. Digital Thermometers change little, if any at all, but can be affected by aging, temperature, shock, and contamination.

Recalibration:

For factory calibration and re-certification traceable to National Institute of Standards and Technology contact Control Company.

CONTROL COMPANY 4455 Rex Road Friendswood, TX 77546 : USA
Phone 281 482-1714 Fax 281 482-9448 service@control3.com www.control3.com

Control Company is an ISO 17025:2005 Calibration Laboratory Accredited by (A2LA) American Association for Laboratory Accreditation, Certificate No. 1750.01.
Control Company is ISO 9001:2008 Quality Certified by (DNV) Det Norske Veritas, Certificate No. CERT-01805-2005-AQ-HOU-ANAB.
International Laboratory Accreditation Cooperation (ILAC) - Multilateral Recognition Arrangement (MRA).

Alcotest 7110 Calibration Record

Equipment Alcotest 7110 MKIII-C Serial No.: ARWC-0060
Location: WILLINGBORO TWP POLICE
Calibration File No.: 00352 Calib. Date: 08/22/2011 Calib. No.: 00016
Certification File No.: 00330 Cert. Date: 03/07/2011 Cert. No.: 00010
Linearity File No.: 00331 Lin. Date: 03/07/2011 Lin. No.: 00010
Solution File No.: 00349 Soln. Date: 07/26/2011 Soln. No.: 00087
Sequential File No.: 00352 File Date: 08/22/2011


Calibrating Unit: WET Model No.: CU-34 Serial No.: DDWE S3-0189
Control Solution %: 0.100% Expires: 09/09/2012
Solution Control Lot: 10I082 Bottle No.: 0315

Coordinator

Last Name: DELLANOCE First Name: JOSEPH MI: S
Signature: Tpc I JSD # 6027 Badge No.: 6027
Date: 08/22/2011

*Black Key Temperature Probe Serial.....# DDWAP2-016 JSD

*Digital NIST Temperature Measuring System Serial.....# 101733534 JSD

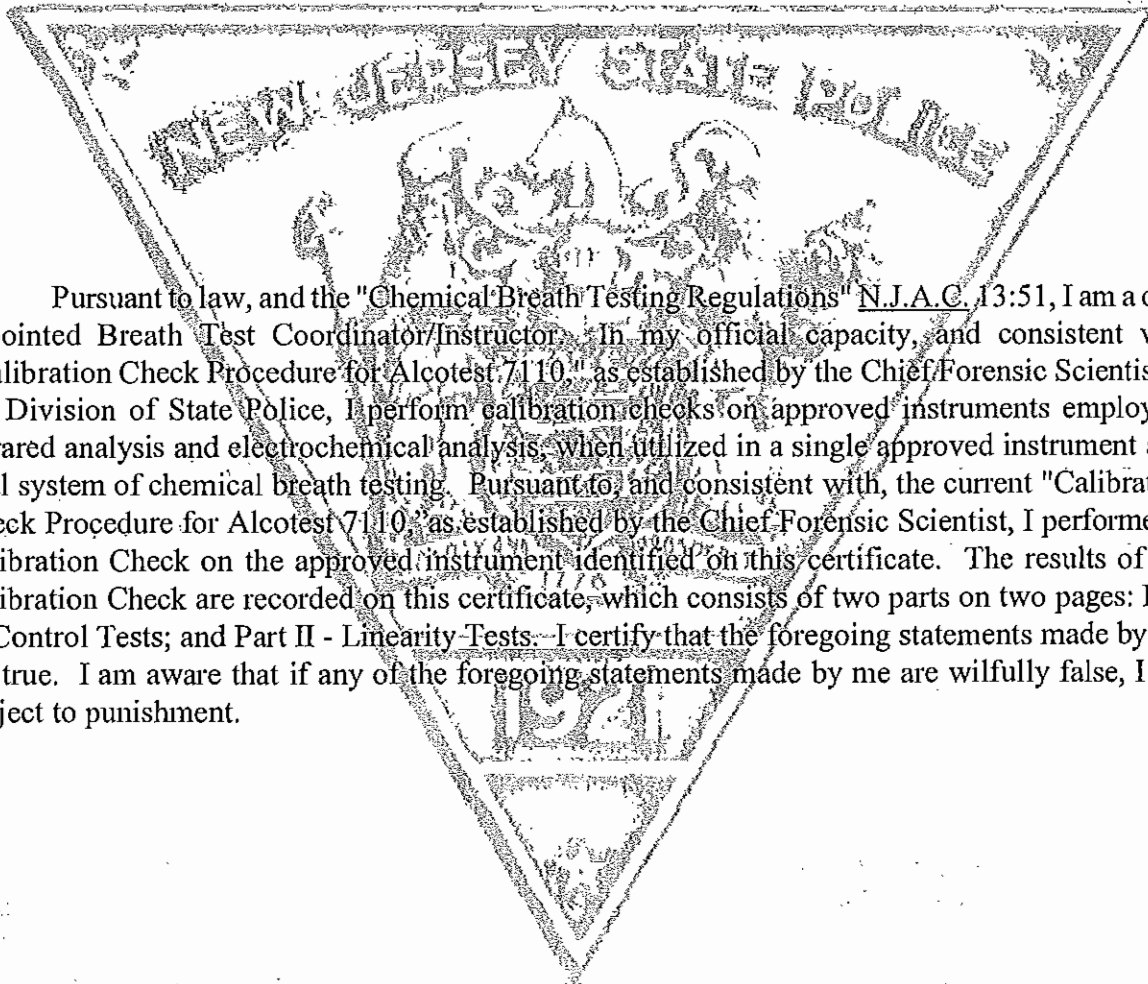

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to, and consistent with, the current "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part I - Control Tests

Equipment Alcotest 7110 MKIII-C Serial No.: ARWC-0060
Location: WILLINGBORO TWP POLICE
Calibration File No.: 00352 Calib. Date: 08/22/2011 Calib. No.: 00016
Certification File No.: 00353 Cert. Date: 08/22/2011 Cert. No.: 00011
Linearity File No.: 00331 Lin. Date: 03/07/2011 Lin. No.: 00010
Solution File No.: 00349 Soln. Date: 07/26/2011 Soln. No.: 00087
Sequential File No.: 00353 File Date: 08/22/2011

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDWE S3-0189
Control Solution %: 0.100% Expires: 09/09/2012
Solution Control Lot: 10I082 Bottle No.: 0315

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	12:55D		
Control 1 EC	0.100%	12:56D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.099%	12:56D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:57D		
Control 2 EC	0.100%	12:57D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.099%	12:57D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:58D		
Control 3 EC	0.100%	12:59D	34.1°C	*** TEST PASSED ***
Control 3 IR	0.096%	12:59D	34.1°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:59D		


All tests within acceptable tolerance.

Coordinator

Last Name: DELLANOCE

First Name: JOSEPH

Mi: S

Signature: 

Badge No: 6027

Date: 08/22/2011

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to, and consistent with, the current "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part II - Linearity Tests

Equipment Alcotest 7110 MKIII-C Serial No.: ARWC-0060
Location: WILLINGBORO TWP POLICE
Calibration File No.: 00352 **Calib. Date:** 08/22/2011 **Calib. No.:** 00016
Certification File No.: 00353 **Cert. Date:** 08/22/2011 **Cert. No.:** 00011
Linearity File No.: 00354 **Lin. Date:** 08/22/2011 **Lin. No.:** 00011
Solution File No.: 00349 **Soln. Date:** 07/26/2011 **Soln. No.:** 00087
Sequential File No.: 00354 **File Date:** 08/22/2011

Calibrating Unit: WET **Model No.:** CU-34 **Serial No.:** DDWE S3-0196
Control Solution %: 0.040% **Expires:** 01/12/2012
Solution Control Lot: 10A073 **Bottle No.:** 0014

Calibrating Unit: WET **Model No.:** CU-34 **Serial No.:** DDWE S3-0203
Control Solution %: 0.080% **Expires:** 01/15/2012
Solution Control Lot: 10A074 **Bottle No.:** 1160

Calibrating Unit: WET **Model No.:** CU-34 **Serial No.:** DDWE S3-0205
Control Solution %: 0.160% **Expires:** 01/21/2012
Solution Control Lot: 10A075 **Bottle No.:** 0713

Function	Result %BAC	Time HH:MM	Temperature Simulator (°C)	Comment(s) or Error(s)
Ambient Air Blank	0.000%	13:14D		
Control 1 EC	0.041%	13:15D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.038%	13:15D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:16D		
Control 2 EC	0.041%	13:17D	34.1°C	*** TEST PASSED ***
Control 2 IR	0.040%	13:17D	34.1°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:19D		
Control 3 EC	0.080%	13:19D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.078%	13:19D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:21D		
Control 4 EC	0.081%	13:21D	34.0°C	*** TEST PASSED ***
Control 4 IR	0.078%	13:21D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:23D		
Control 5 EC	0.161%	13:23D	34.0°C	*** TEST PASSED ***
Control 5 IR	0.159%	13:23D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:25D		
Control 6 EC	0.161%	13:25D	34.0°C	*** TEST PASSED ***
Control 6 IR	0.159%	13:25D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:27D		

All tests within acceptable tolerance.

Coordinator

Last Name: DELLANOCE

First Name: JOSEPH

MI: S

Signature: Tpr I [Signature] # 6027

Badge No.: 6027

Date: 08/22/2011

DEPARTMENT OF
Health and Public Safety
 This is to certify that

Joseph S. Dellanoce
 New Jersey State Police

IS QUALIFIED AND COMPETENT TO CONDUCT TRAINING WITH BULLETS PURSUANT TO CHAPTER 143 OF
 THE LAWS OF 1946 IN THE OPERATION OF THE Alcotest 7110 MKII-C
 A METHOD TO DETERMINE INTOXICATION
 GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY THIS 20th day of March

TWO THOUSAND AND FIVE

[Signature]
 SUPERINTENDENT
 NEW JERSEY STATE POLICE

[Signature]
 ATTORNEY GENERAL
 STATE OF NEW JERSEY

ORIGINAL COURSE DATES

	DATE	Refresher Course PLACE	INSTRUCTOR
1.	2/15/07	CCPA	C. POTTER
2.	12/7/09	OLPA	Adams Stambor
3.	7/20/11	STOCKTON	Adams Stambor
4.			
5.			
6.			
7.			
8.			
9.			

DEPARTMENT OF
Traffic and Public Safety
This is to certify that

Joseph S. Dellanoce
 New Jersey State Police

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL ANALYSES PURSUANT TO CHAPTER 10 OF
 THE LAWS OF 1964 IN THE OPERATION OF THE Breath Test Coordinator/Instructor
 A METHOD TO DETERMINE INTOXICATION
 GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY, THIS 14th DAY OF January

TWO THOUSAND AND EIGHT

[Signature]
 SUPERINTENDENT
 NEW JERSEY STATE POLICE

[Signature]
 ATTORNEY GENERAL
 STATE OF NEW JERSEY

ORIGINAL COURSE DATES

	DATE	Refresher Course PLACE	INSTRUCTOR
1.	12/7/09	OCPA	Adam Stankos
2.	7/20/11	STOCKTON	Adam Stankos
3.			
4.			
5.			
6.			
7.			
8.			
9.			



JON S. CORZINE
Governor

State of New Jersey
OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
PO Box 080
TRENTON, NJ 08625-0080

ANNE MILGRAM
Attorney General

January 14, 2008


Col. Joseph R. Fuentes, Superintendent
Division of State Police
Division Headquarters
P.O. Box 7068
West Trenton, New Jersey 08628

Re: Breath Test Coordinator/Instructor, Certification -
Trooper Joseph S. Dellanoce #6027

Dear Colonel Fuentes:

Pursuant to the provisions of *N.J.A.C.* 13:51-2.1 (b) and (c), as adopted and promulgated under the provisions of *N.J.S.A.* 39:4-50.3, 39:3-10.25 and 12:7-56, I hereby approve Trooper Joseph S. Dellanoce #6027, as a duly certified Breath Test Coordinator/Instructor. This approval is effective immediately.

Very truly yours,


Anne Milgram
Attorney General

jk

c. Trooper Joseph S. Dellanoce #6027, Alcohol/Drug Test Unit, Division of State Police
Lt. Mark Kolodzieski, Unit Head, Alcohol/Drug Test Unit, Division of State Police



820474



CERTIFICATE

This is to certify that


Joseph S. Dellanoce #6027

has successfully completed the two day Draeger Safety Diagnostics, Inc. Operator Training and Preventive Maintenance Course on the New Jersey specific Alcotest® 7110 MKIII-C and is hereby certified as a qualified

**Operator Trainer and
Maintenance Technician**

Completion of this course qualifies this individual to train and certify Operators in the proper use and operation as well as perform Preventive Maintenance on the New Jersey specific Alcotest® 7110 MKIII-C.

Date: 4/12/2007

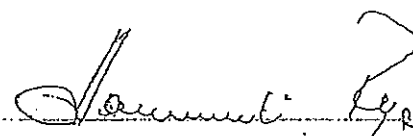

Instructor: Hansueli Ryser

Dräger

DEPARTMENT OF
Law and Public Safety

This is to certify that
Joseph S. Bellanocè
New Jersey State Police

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL BREATH ANALYSES PURSUANT TO CHAPTER
142 OF THE LAWS OF 1944 IN THE OPERATION OF THE **Breathalyzer**
A METHOD TO DETERMINE INTOXICATION.

GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY THIS 13th DAY OF Dec.
TWO THOUSAND AND 01

Cum Fildf
SUPERINTENDENT
NEW JERSEY STATE POLICE

g. A. J.
ATTORNEY GENERAL
STATE OF NEW JERSEY

ORIGINAL COURSE DATES: 8/30 - 9/3/99

Refresher Course

1.	DATE	PLACE	INSTRUCTOR
	<u>12/12/01</u>	<u>A.G.P.C.</u>	<u>Potter</u>
2.	<u>7-28-03</u>	<u>CCRA</u>	<u>C. Potter</u>
3.	<u>10/3-05</u>	<u>ACTC</u>	<u>C. Stamba</u>
4.			
5.			
6.			
7.			
8.			
9.			

SP-2938 (Rev. 4/00)



Dräger

ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST). The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification. For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

DDWAP2-016

Certification date:

February 7, 2011

Next Certification due:

February 7, 2012

Probe Value

107

Draeger Safety Diagnostics, Inc.
Technical Service Department





CHRIS CHRISTIE
Governor

State of New Jersey
OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
Post Office Box 7068
West Trenton NJ 08628-0068
(609) 882-2000

PAULA T. DOW
Acting Attorney General
COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.04 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.045 to 0.051 grams per 100 milliliters of solution.


MANUFACTURER: Drager Safety, Inc. ANALYSIS DATE: 2/2/2010

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 10A073


Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0479 to 0.0481 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath-test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is January 12, 2012.

As Assistant Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

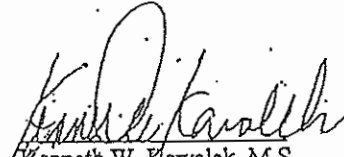
Kenneth W. Kawalek, M.S.
Assistant Chief Forensic Scientist
Division of State Police

Sworn to and subscribed before me this 19th day of February, 2010.

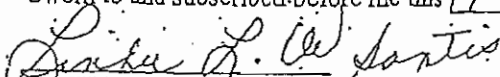
Notary

Linda L. D'Amico
Notary Public, New Jersey
My Commission Expires 6-17-14



New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper





State of New Jersey
 OFFICE OF THE ATTORNEY GENERAL
 DEPARTMENT OF LAW AND PUBLIC SAFETY
 DIVISION OF STATE POLICE
 POST OFFICE BOX 7068
 WEST TRENTON NJ 08628-0068
 (609) 882-2000

CHRIS CHRISTIE
 Governor

PAULA T. DOW
 Acting Attorney General

COLONEL JOSEPH R. FUENTES
 Superintendent

CERTIFICATION OF ANALYSIS
0.08 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.094 to 0.099 grams per 100 milliliters of solution.


MANUFACTURER: Drager Safety, Inc. ANALYSIS DATE: 2/3/2010

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 10A074


Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0954 to 0.0958 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is January 15, 2012.

As Assistant Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

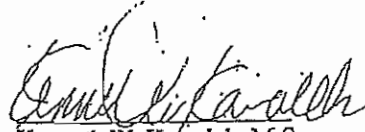
 Kenneth W. Kawalek, M.S.
 Assistant Chief Forensic Scientist
 Division of State Police

Sworn to and subscribed before me this 19th day of February, 2010.

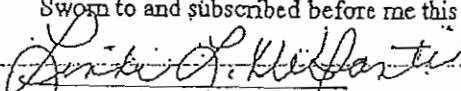
 Notary.

Linda L. Demaris
 Notary Public, New Jersey
 My Commission Expires 8-17-14





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON NJ 08628-0068
(609) 882-2000

CHRIS CHRISTIE
Governor

KIM GUADAGNO
Lt. Governor

PAULA T. DOW
Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.117 to 0.125 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.


ANALYSIS DATE: 9/23/2010

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 10I082


Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1190 to 0.1194 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is September 9, 2012.

As Assistant Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.


Kenneth W. Kawalek, M.S.
Assistant Chief Forensic Scientist
Division of State Police

Sworn to and subscribed before me this 28th day of September, 2010.

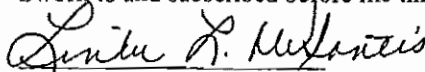
Notary

Linda L. Desantis
Notary Public, New Jersey
My Commission Expires 8-17-14



New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





CHRIS CHRISTIE
Governor

State of New Jersey
OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON NJ 08628-0068
(609) 882-2000

PAULA T. DOW
Acting Attorney General
COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.16 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.188 to 0.199 grams per 100 milliliters of solution.


MANUFACTURER: Dräger Safety, Inc. ANALYSIS DATE: 2/4/2010

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 10A075


Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1913 to 0.1919 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is January 21, 2012.

As Assistant Chief Forensic Scientist of the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

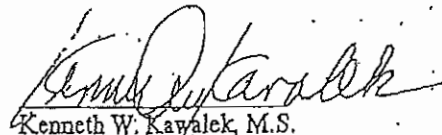

Kenneth W. Kawalek, M.S.
Assistant Chief Forensic Scientist
Division of State Police

Sworn to and subscribed before me this 19th day of February, 2010.

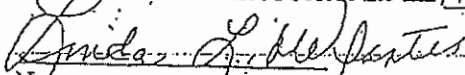
Notary

Under L. Dorez
Notary Public, New Jersey
My Commission Expires 8-17-14



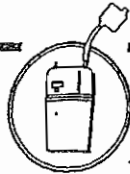

Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
 Model: MARK IIA
 Other: _____

Serial Number:

DDWE 53-0196

Certification Date


Technician

Re-Certification Due Date

2/28/11

DM

2/28/12

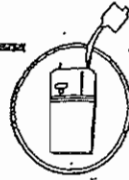

Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDWBS3-0203

Certification Date


Technician

Re-Certification Due Date

February 7, 2011

ZM

February 7, 2012

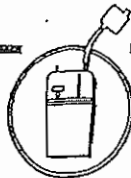

Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
 Model: MARK IIA
 Other: _____

Serial Number:

DDWES3-0205

Certification Date

Technician

Re-Certification Due Date

February 7, 2011

DM

February 7, 2012

Calibrating Unit New Standard Solution Report

Equipment	Alcotest 7110 MKIII-C	Serial No.: ARWC-0060
Location:	WILLINGBORO TWP POLICE	
Calibration File No.:	00352	Calib. Date: 08/22/2011
Certification File No.:	00353	Calib. No.: 00016
Linearity File No.:	00354	Cert. Date: 08/22/2011
Solution File No.:	00355	Cert. No.: 00011
Sequential File No.:	00355	Lin. Date: 08/22/2011
		Lin. No.: 00011
		Soln. Date: 08/22/2011
		Soln. No.: 00088
		File Date: 08/22/2011

Calibrating Unit:	WET	Model No.: CU-34	Serial No.: DDWE S3-0189
Control Solution %:	0.100%		Expires: 12/31/2011
Solution Control Lot:	09L072		Bottle No.: 0209

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	14:31D		
Control 1 EC	0.100%	14:32D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.099%	14:32D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:33D		
Control 2 EC	0.099%	14:33D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.099%	14:33D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:34D		
Control 3 EC	0.100%	14:35D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.097%	14:35D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:35D		

All tests within acceptable tolerance.

On this date, I installed the above indicated "NEW SOLUTION" in accordance with Alcotest 7110 operator training and procedures established by the (NJSP) Chief Forensic Scientist.

TEMPERATURE PROBE SERIAL NUMBER: DDUNP2-293 *js*

Changed By:

Last Name: DELLANOCE

First Name: JOSEPH

MI: S

Signature: _____

Tr I JS # 6027

Badge No.: 6027

Date: 08/22/2011



CHRIS CHRISTIE
Governor

State of New Jersey
OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE Box 7068
WEST TRENTON NJ 08628-0068
(609) 882-2000

PAULA T. DOW
Acting Attorney General
COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.117 to 0.125 grams per 100 milliliters of solution.

MANUFACTURER: Drager Safety, Inc.

ANALYSIS DATE: 1/15/2010

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 09L072

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have an ethyl alcohol concentration range of 0.1203 to 0.1210 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-3.4, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is December 31, 2011.

As the Director of Office of Forensic Sciences, Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at my direction and under my supervision by personnel of, and at, the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Howard J. Baum, Ph.D.
Director, Office of Forensic Sciences
Division of State Police

Sworn to and subscribed before me this 21 day of January, 2010.

Notary

JOHN R. LEAVER
NOTARY PUBLIC STATE OF NEW JERSEY
MY COMMISSION EXPIRES 12/14/2012



New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable

